


## How to use

Please read this instruction manual carefully before use.

- Before plugging in the plug, please confirm that the voltage of the socket at home is consistent with this product.
- Before the first use, please take out all the packaging items on the product, remove the inner pot and inner cover, and put them under the tap for cleaning.
- Before putting the inner pot into the pot, please confirm whether there are rice grains or other vegetable residues on the bottom of the inner pot and the heating plate. Make sure that the inner pot and the heating plate are completely and tightly attached.

## Product parts name

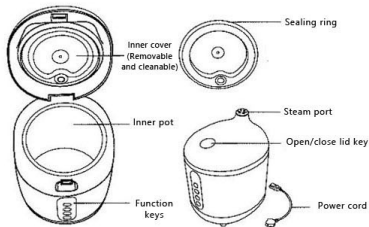

## Accessories



1 x rice spoon



1 x measuring cup



1 x steaming bowl

## Detailed operation panel

Features	Operation method	Corresponding water ruler	Cooking limit	Cooking time
Meal	Press the [Rice/Porridge] button lightly, the cooking function indicator light flashes for 3 seconds, and after the flashing stops, the indicator light is always on, and the rice cooking program is entered.	Meal	Rice: 0.5-1.5 cups rice Water mixture: no more than water gauge (rice) maximum water line	About 25 minutes
Porridge	Press the [Rice/Porridge] button twice, the cooking function indicator light flashes for 3 seconds, after the flashing stops, the indicator light is always on, entering the porridge cooking program.	-	-	About 45 minutes
Steam	Lightly press the [Steam] button, the steaming function indicator will flash for 3 seconds, and after the flashing stops, the indicator will be on and enter the steaming program.	-	-	About 20 minutes
Stew	Press the [Stew/Stew] button twice, the stew function indicator flashes for 3 seconds, and after it stops flashing, the indicator light is always on, and the stew program is entered.	-	-	About 90 minutes
Reservation	1 Press the function key to select the function you want to reserve, and the indicator light flashes. 2 Press (Reservation) key again to select the reservation time. After the indicator light stops flashing, it will stay on and enter the reservation procedure.	-	-	Longest reservation time 24 hours
Keep warm	Press the [Keep Warm/Cancel] button lightly. Heat preservation function indicator light shal.	-	-	12 hours

\*The function program list is for reference only and is subject to change without notice.

- The actual cooking time will vary according to the amount of rice, water, room temperature, water temperature, rice type, and voltage.
- The cooking rice, porridge, steaming and stewing functions will display the remaining time when the cooking is about to finish. When cooking multi-grain rice with various beans, it is recommended to soak it in warm water for 1-2 hours in advance.
- After cooking, the rice cooker will automatically enter the keep warm state.
- The reservation time of this product is the cooking start time.
- Reminder: The reservation for rice should not exceed 8 hours, otherwise it may cause the rice to ferment and stink.
- After the function program starts to run, if you want to cancel, you can press the [Keep Warm | Cancel] button to cancel.

## Status indication

Standby mode



**Working status:** The indicator light of the marquee status function of the display screen is always on, and the rice function is the reverse



**Reservation function:** Reservation duration 24h (7h example below)



**Keep warm status:**  
Keep warm indicator light on



**Working status:**  
remaining 5 minutes display



**Fault display**



- Standby state: the display area shows "--" characters.
- Working state: the indicator of the marquee status function on the display is always on, showing the characters "F"
- Keep warm state: the keep warm indicator is always on, and the display area is now keeping warm time.
- Reservation function: The specific reservation time can be adjusted by yourself. The number in the translucent display area is the reservation time.
- Countdown reminder: when the countdown is 5 minutes after cooking, steaming, porridge and stewing, when the countdown is 20 minutes, the display area will automatically remind.
- Fault status: "E1" character appears in the display area

## Precautions

Please read the manual in detail before using it, and please keep it properly.

- This product is not suitable for children and those who do not have full capacity to operate. When the rice cooker is working, do not let children touch the rice cooker.
- Before using this product, in order to ensure safety, you should check the body in advance and whether the power cord is damaged.
- The use of this product must use a grounded stand, and the plug should be inserted tightly, otherwise problems such as poor contact are likely to occur
- Do not use the power cord for other heating products, when the product is not in use, you should pull out the plug in time.
- When using this product, it should be placed on a stable table and away from flammable materials
- Do not wash the rice cooker directly in water to avoid short circuit and electric shock.
- Do not plug in or pull out the plug with wet hands to avoid electric shock, and do not pull the power cord forcibly when pulling out the broadcast head.
- Keep the plug clean to avoid bad contact.
- The inner pot cannot be heated on other stoves, otherwise it will be easy to deform.
- Do not place any food or water until the inner pot is placed in the main unit.
- When the rice cooker is working, do not use your face or hands to get close to the vent to avoid back injury. Do not cover and block the vent holes with a cloth/towel, etc., so as not to cause the cover to be distorted due to overheating.
- Do not place the rice cooker in a flammable or humid environment.
- Do not attack the inner pot violently, otherwise it is easy to cause the rice cooker to malfunction due to the deformation of the inner pot, causing danger.
- Do not use dangerous tools to clean the inner pot, so as not to damage the Maifan stone coating.
- Only use other manufacturers or other inner pots used in this product instead, so as to avoid product failure or danger
- After use, the rice cooker will become hot, do not touch to avoid injury.
- Do not disassemble the product or replace parts by yourself. For repairs, please contact the customer service hotline.
- If the power cord is damaged, do not replace other power cords without authorization, you should contact the customer service hotline for replacement.
- The normal working altitude range of this product is 0-2000 meters.

## Care and maintenance

### Clean the inner pot

1. Use hot water, detergent and sponge to clean the inner pot, steaming bowl and aluminum alloy overflow-proof inner lid. Do not use decontamination powder and steel balls.
2. If there is food stuck to the bottom of the inner pot, you can soak it for a while before cleaning, and then wipe the inner pot clean.

### Maintenance of inner pot

1. Please use plastic or wooden levers, not metal levers, to avoid scratching the inner steel Maifan stone coating.
2. In order to protect the life of the non-stick coating as much as possible, it is not recommended to cut food in the inner pot.
3. In order to avoid corrosion, do not pour cool and oil into the inner pot.

### Clean and maintain other parts of the electric rice cooker

1. Clean the inner ring, sealing cover and exterior of the electric rice cooker with a damp cloth.
2. If there is water on the electric heating plate, please dry it with a rag. If there are burnt rice grains, please use a steel ball or sandpaper to polish it off.

\* Note: Please cut off the power before cleaning, and clean after the rice cooker has cooled to prevent burns.

## Troubleshooting and handling method

Fault phenomenon	Cause	Solution
The indicator light is not on	<ol style="list-style-type: none"> <li>1. The power supply of the circuit board is not connected</li> <li>2. Indicator light failure</li> </ol>	<ol style="list-style-type: none"> <li>1. Check whether the product is plugged in tightly</li> <li>2. Please call the company's after-sales hotline</li> </ol>
Heating plate not heating	<ol style="list-style-type: none"> <li>1. The power cord is not connected</li> <li>2. Damage to the power cord</li> <li>3. Circuit board damage</li> <li>4. Heating plate failure</li> <li>5. Connection failure</li> </ol>	<ol style="list-style-type: none"> <li>1. Check whether the product is plugged in tightly</li> <li>2,3,4,5. Please call the company's after-sales hotline</li> </ol>
The indicator light is not on, The heating plate is not hot	<ol style="list-style-type: none"> <li>1. Heating plate failure</li> <li>2. Circuit board failure</li> </ol>	Please call the company's after-sales hotline
Not cooked rice	<ol style="list-style-type: none"> <li>1. Overcooked or undercooked</li> <li>2. The ratio of rice to water is wrong</li> <li>3. Inner pot is not put in place and hangs in the air</li> <li>4. There is a foreign object between the inner pot and the heating plate</li> <li>5. Deformation of the inner pot</li> <li>6. Circuit board failure</li> <li>7. Sensor failure</li> </ol>	<ol style="list-style-type: none"> <li>1. Adjust the total capacity of rice and water, and the range is between the highest and lowest scale lines</li> <li>2. Adjust the ratio of rice to water</li> <li>3. Rotate the inner pot from side to side to make it return to normal</li> <li>4. Clean up foreign objects</li> <li>5,6,7. Please call the after-sales hotline of the company</li> </ol>
Burnt rice	<ol style="list-style-type: none"> <li>1. Deformation of the inner pot</li> <li>2. The inner pot is not properly placed and hangs in the air</li> <li>3. Circuit board failure</li> <li>4. Sensor failure</li> </ol>	<ol style="list-style-type: none"> <li>1. Please call the company's after-sales hotline</li> <li>2. Rotate the inner pot left and right to return it to normal</li> <li>3,4. Please call the company's after-sales hotline</li> </ol>
Overflow	Too much water	Reduce water volume
Display shows error code: E1	Failure of electric rice cooker	Please call the company's after-sales hotline