



We care what you care.

Multifunctional electric lunch box

ODI-DFH11

Instruction manual




This product is only for use in homes and similar places Before using the product, please read this instruction manual carefully and keep it safe!

Executive standard: GB4706.1-2005 GB4706.19-2008

Product introduction

This product is one of the multi-functional electric lunch box series products independently developed by our company. The appearance is novel, the lines are smooth, the shape is beautiful, the use is simple, safe and reliable. Multifunctional electric heating | The lunch box uses steam to heat food. The cooked food not only retains the nutrition of the food, but also keeps the food clean and hygienic. It is an ideal health product. Make it easy for you to enjoy nutritious, delicious, healthy meals.

Parts and installation drawings

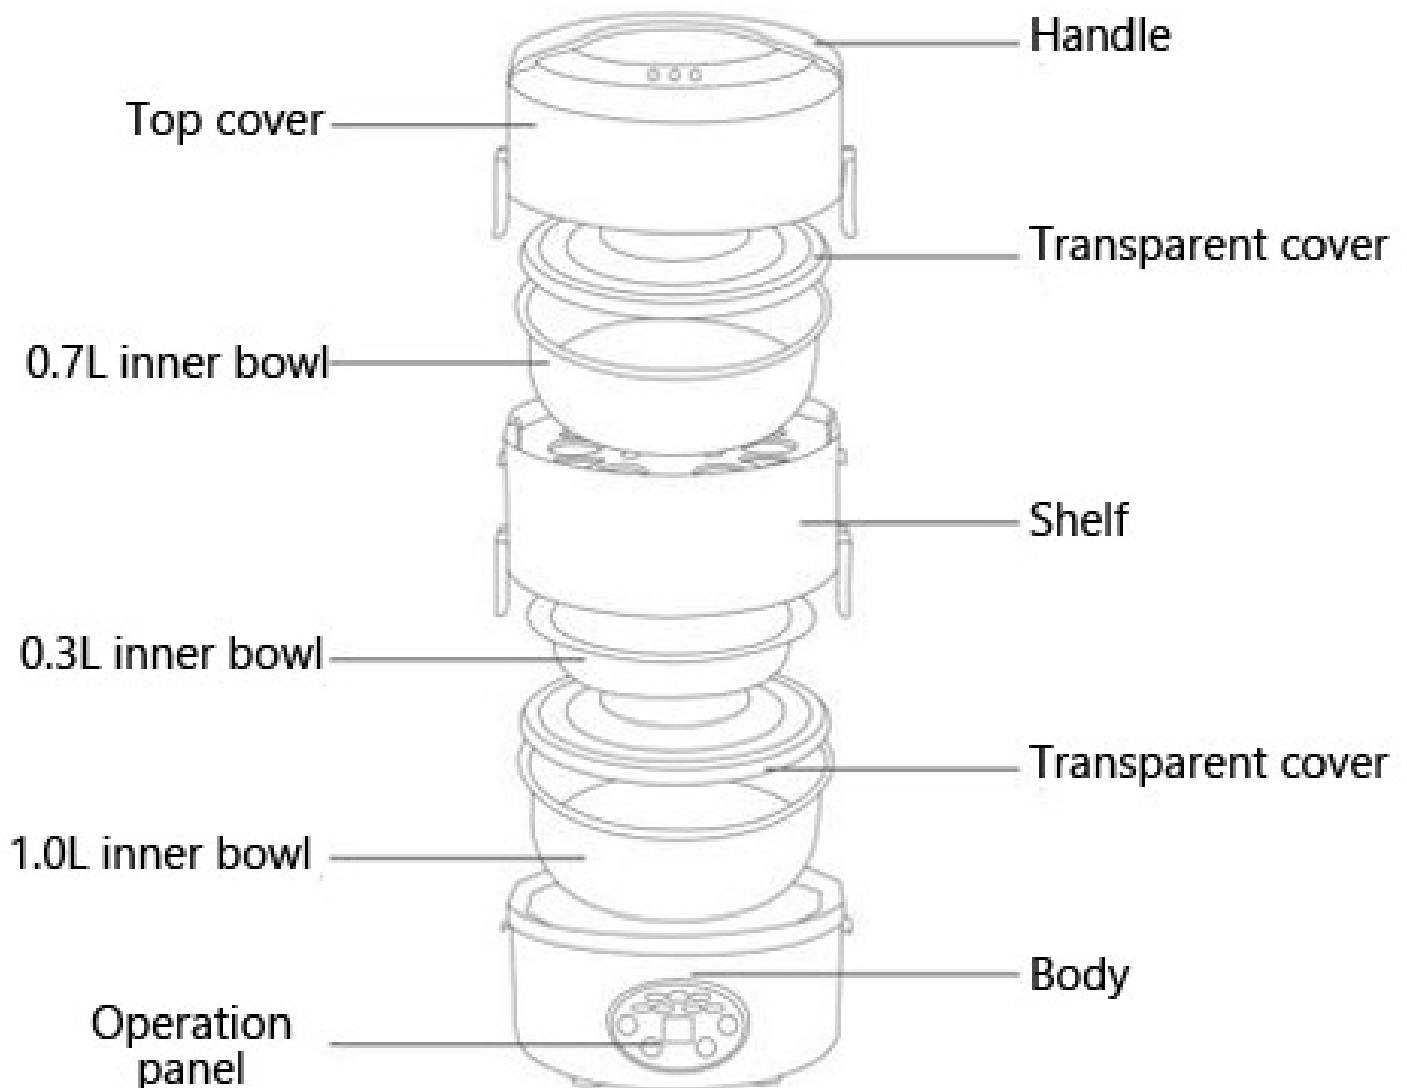

Performance characteristics

1. Fashionable appearance, exquisite craftsmanship;
2. Simple operation, convenient and fast;
3. Meals and soups are packed separately, without skewers;
4. With anti-dry burning and power-off protection function;
5. Can heat meals and cook rice;
6. Cooking maintains the umami taste, hygiene and nutrition of food;
7. Constant temperature PTC heating, automatic adjustment of power, saving power;
8. The separate shelf structure can be used freely.

Usage method

1. Heating meals: add 200ml of water into the body, put the rice, vegetables and soup to be heated into the lunch box, vegetable plate and soup bowl in the original packaging, and then put them into the body together, and then cover the shelf and upper cover. , turn on the power, press the switch, about 15-18 minutes to eat. (As shown below)



Pour about 200ML of water into the body



Put the food in the inner pot, reassemble the machine



Plug in the power, press the switch for about 15-18 minutes and you are ready to eat

2. Cooking rice: Add about 200ML of water into the body, pour a proper amount of raw rice and water into the inner tank of the lunch box and put them into the body together, then close the cover, turn on the power, press the switch, about 30- Ready to eat in 40 minutes. (As shown below)



Pour about 200ML of water into the body



Put the raw rice and water in the inner pot, reassemble the machine



Plug in the power, press the switch for about 30-40 minutes and you can eat

Reminder:

1. Please do not cover the matching lunch box lid when cooking the above hot meals and cooking rice;
2. When the machine is working, please do not touch the cover and handle to avoid burns.

Matters needing attention

1. Before use, check whether the rated voltage marked on the product nameplate is consistent with the voltage you are using;
2. Please use a power supply with grounding protection to ensure personal safety;
3. The product should be placed on a stable platform and placed in places out of reach of children;
4. Do not use excessive force when pressing the switch button to prevent the button switch from being damaged;
5. Do not use this product on or near the surface or near heat-labile objects such as carpets, plastics, etc., it will be damaged by steam. Do not place objects on top of this product;
6. If the product is dry, please add water to the product or unplug the power supply. At this time, do not touch the heating plate with your hands to prevent burns;
7. When the product is used, a large amount of steam will be ejected from the steam port. Be careful to be scalded by the steam;
8. After cooking food, there is still a lot of steam in the body, do not open the top cover immediately, wait a few minutes before turning off the power to prevent steam burns;
9. The machine has an overheating protection function, If you need to cook food continuously, let the machine cool down properly before cooking the food for the second time, otherwise the working indicator will not light;
10. Do not immerse the machine in water or let liquid flow into the inside of the electric lunch box when cleaning to avoid danger;
11. If the power cord is damaged, it must be replaced by a professional from the manufacturer, its maintenance department or similar department in order to avoid danger.

Cleaning and maintenance

1. After use, please unplug the power plug from the power socket in time;
2. The inner tank, dish, and upper cover can be cleaned with detergent and sponge, do not use hard steel balls to clean, so as not to damage the surface;
3. When the body is dirty, it can be wiped with wet hair. Please do not immerse the body in water to clean it, so as to avoid malfunction and leakage of electricity;
4. When the product is not used for a long time, please clean it and put it in the box. Put it in a ventilated and dry place to avoid moisture and affect the use.

Analysis of common problems

Fault phenomenon	Cause analysis
Power indicator does not light up	<ol style="list-style-type: none"> 1. Is there a power outage? 2. Is the power cord inserted into the socket? 3. Is the power socket turned off? 4. Is the tail plug of the power cord of the electric heating lunch box connected to the tailstock of the body and plugged in tightly? 5. Is the switch button closed? 6. Is the water burned dry, and the body is in a state of protection against dry burning?
Steamed rice is too cooked or raw	<ol style="list-style-type: none"> 1. Too much or too little water (too much water is too cooked, too little water is too raw)? 2. Is the heating plate covered with too thick scale?

Remarks: After analyzing the above phenomena, it is still impossible to eliminate or other faults, please contact the company's maintenance point or dealer, and it is strictly forbidden for non-professionals to disassemble and assemble the machine.

Product specification

Product name	Multifunctional electric lunch box	Product model	ODI-DFH11
Rated voltage	220V~	Rated capacity	2.0L
Rated frequency	50Hz	Rated power	270W
Packing list	Upper lid, transparent lid, soup bowl, shelf, Dish, liner, body, power cord, manual		