


 



 

















Safety Notice


In order to ensure the safety of use and avoid unnecessary injury and property damage caused by misuse, please be sure to observe the following safety precautions. Misuse without obeying safety warnings may result in an accident.

- | | |
|---|--|
|  Indicates [prohibit] content |  [Warning] matters that may cause personal injury or death |
|  Indicates [mandatory] content |  [Caution] matters that may cause minor injury or property damage |

-  1. It is strictly forbidden to idle or overload or use this product when it is working.
-  2. When this product is working, it is forbidden to move the product or touch the moving parts to avoid accidental injury.
-  3. Do not hang the power cord on sharp objects.
-  4. It is forbidden to use this product on a sloping table or an unstable table.
-  5. Do not use inferior power strips to avoid fire and personal injury.
-  6. It is forbidden to place the product too close to the stove to avoid damage to the product or cause fire and personal injury.
-  7. Do not let children operate and use the product alone, do not let children use the product as a toy, and keep it out of reach of children.
Elderly or disabled persons and inexperienced persons should use this product under supervision and guidance.
-  8. If the power cord of the ticket is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments.
-  9. Before disassembling or debugging any part of the product, please ensure that the product is powered off.
-  10. Do not use accessories and accessories other than this product to avoid fire and personal injury.
-  11. Do not run this product unattended.
-  12. Before use, please confirm whether the voltage is consistent with the specifications of this product (220V-50Hz), so as not to cause product safety problems.
-  13. The continuous stirring working time of this product must not exceed 6 minutes. During operation, if the machine base is found to be overheated, it should be stopped for about 20 minutes, and the operation can be continued after it cools down.
-  14. This product is equipped with an overheating protection device. When it is used abnormally or the motor is running in excess, the product will automatically shut down for protection. If it still cannot start after 30 minutes of protection, you need to contact the after-sales service for maintenance.
Please do not disassemble the machine by yourself.
-  15. After using the product, it is necessary to clean the cup body and parts that are in contact with food to avoid long-term use and contamination by residues.
-  16. If the product is stuck during use, please turn off the power immediately, unplug the power plug, take off the standard mixing cup, take out the material with the stuck blade, and wait for the motor to cool down before continuing to use it.
-  17. If the product is easy to use, please ensure that the product is clean: After using the product, please unplug the power supply and clean the product in time.
-  18. Please keep more than 30cm between this product and other house appliances.
-  19. Before starting the product, please make sure that the lid of the cup is properly placed in the well of the mixing cup and turned clockwise to prevent the cup inside the cup during work. Drinks overflow.
-  20. Do not use this product to directly heat flour or rice flour. Soy flour is equal to flour or milk, bean and vegetable rice paste and other sticky liquids.
Otherwise, it will cause serious paste bottom and produce peculiar smell.

Product introduction

Product and parts list

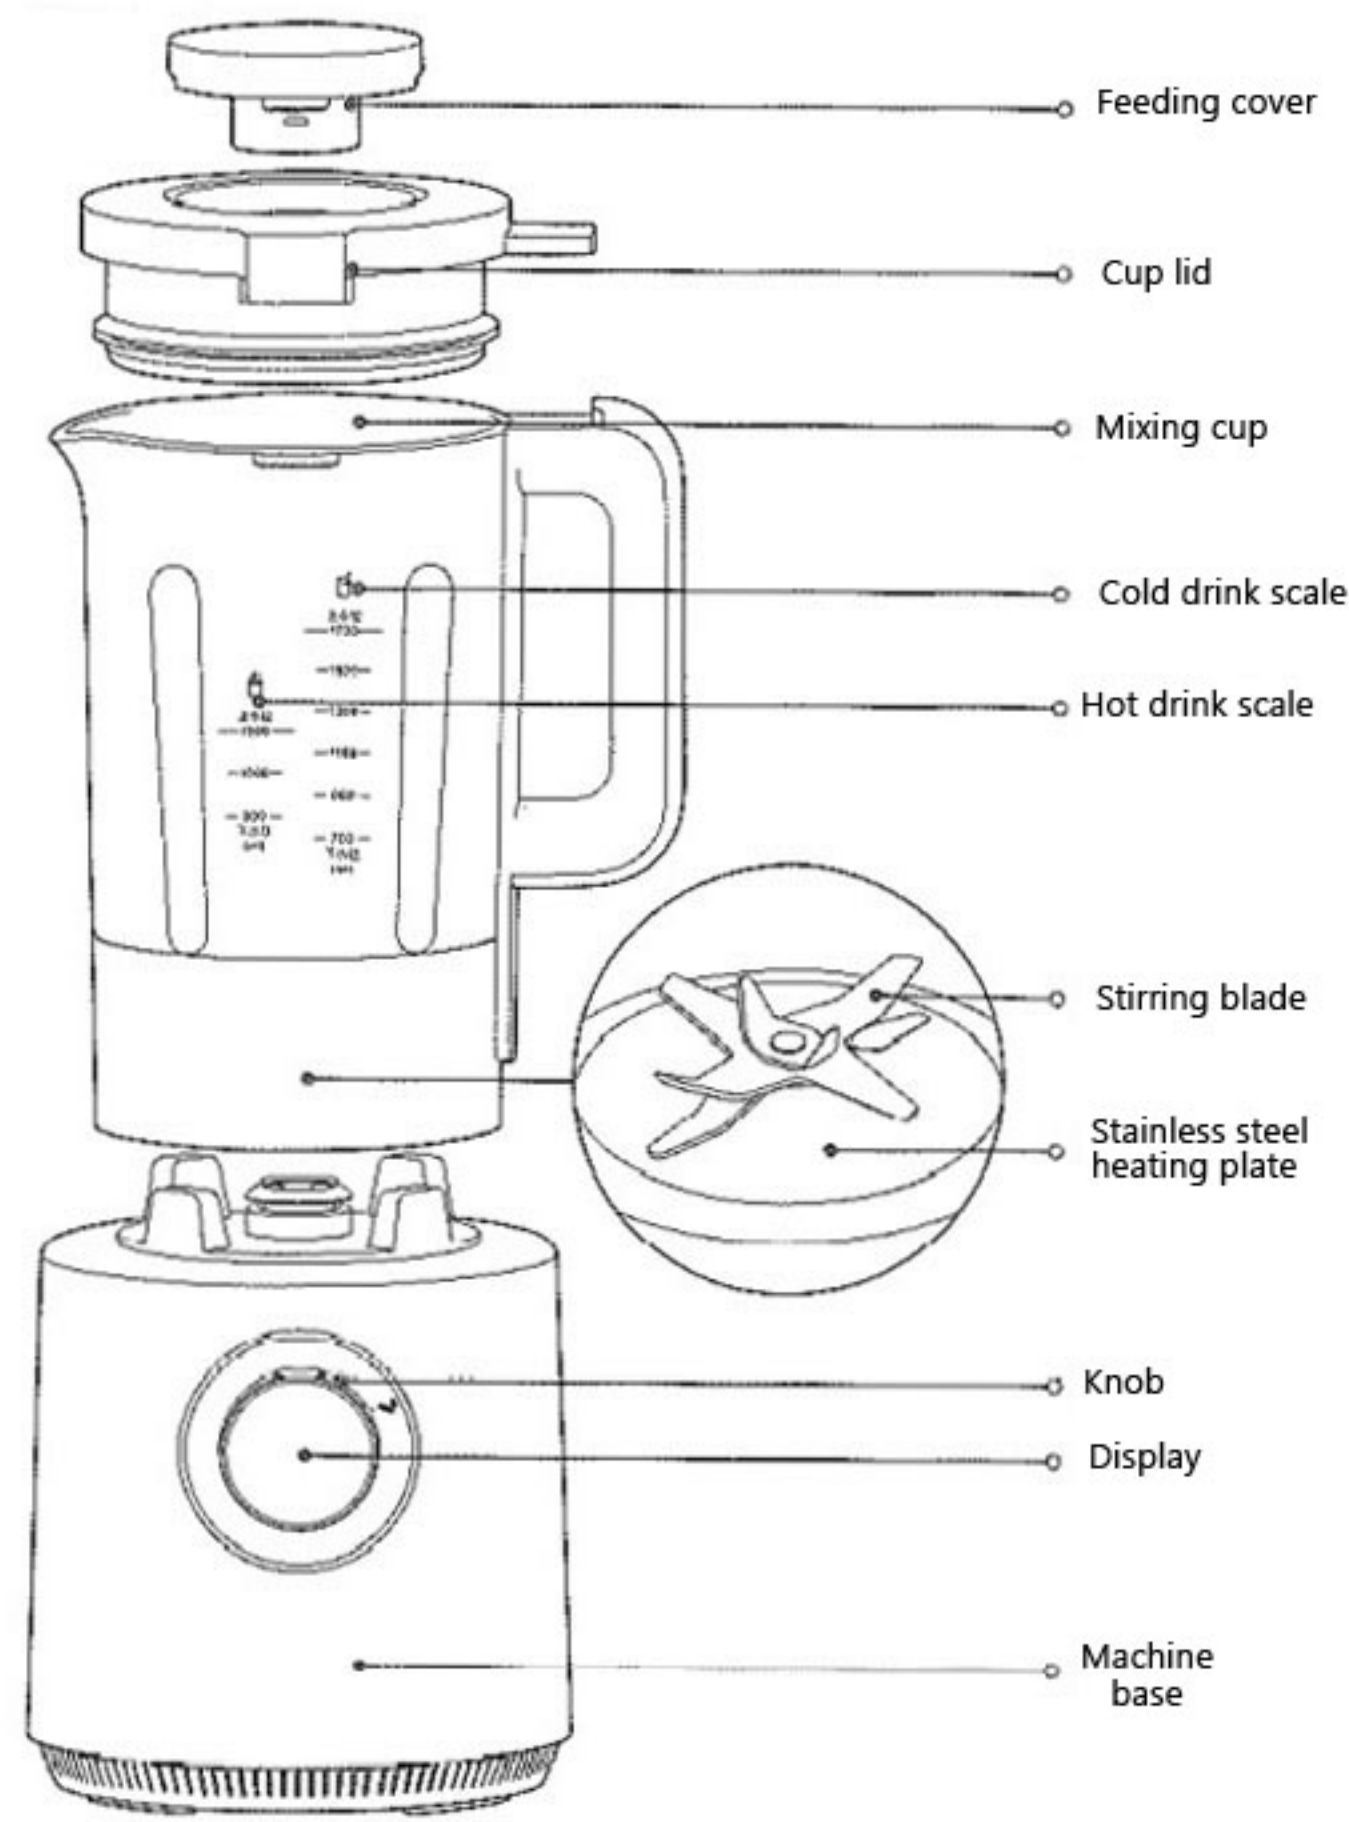

Stirring rod




Brush



Measuring cup

Part name	Features
Charging cap	Remove to add
Lid	Prevent the ingredients from being reduced, and the lid can be installed in place before the product can be started.
Mxing cup	A container for ingredients, containing a blade for the ingredients of the powder stove.
Knob	Used to select functions.
Display	Used to display functions and status.
Machine base	Product power source.
Stirring rod	It is used to assist in crushing and stirring ingredients.
Brush	Used in cleaning products.
Measuring cup	It is used to measure soybeans, rice and other ingredients.


Product description

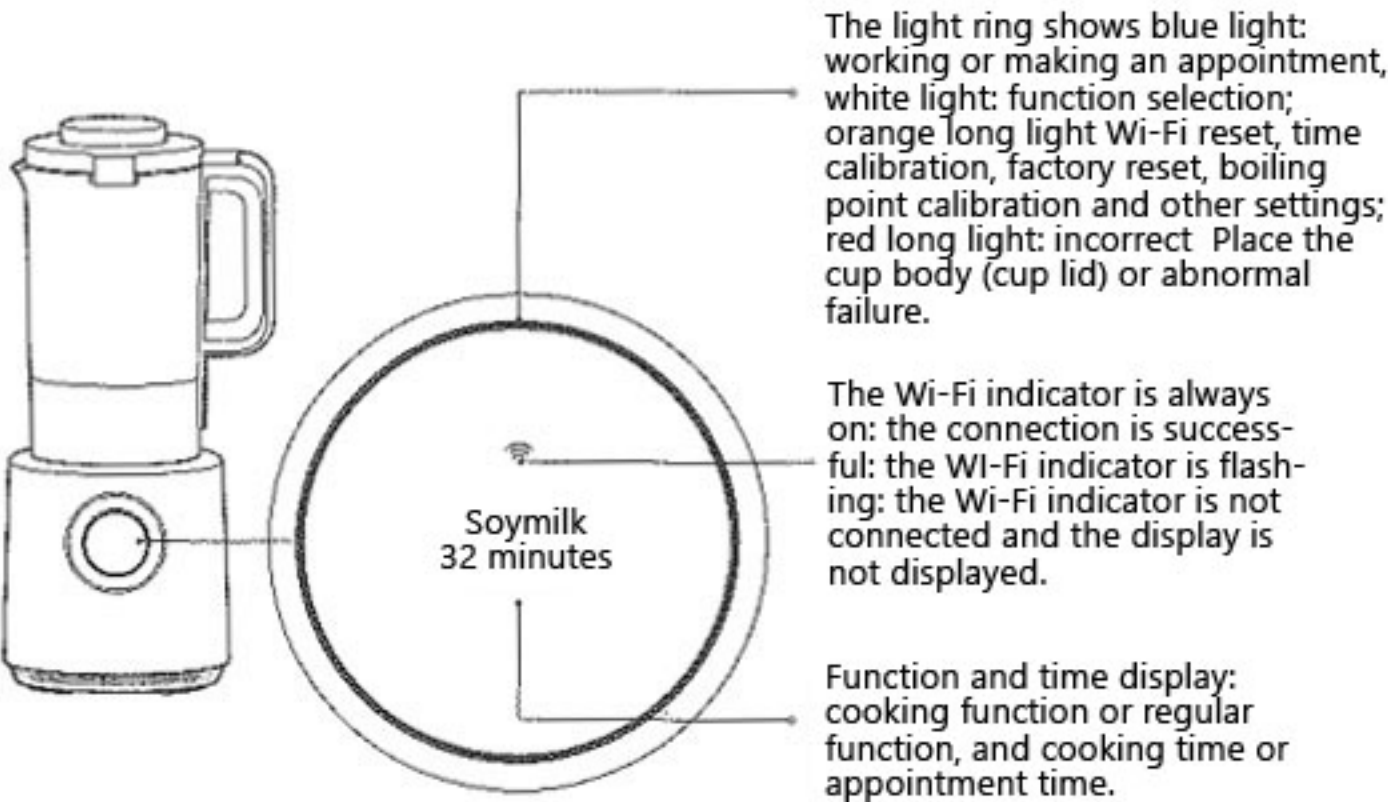

Product features	Function introduction
Cooking function	Hot drink: soy milk, rice soup, thick soup, porridge, corn juice
	Cold drink: fruit and vegetable juice, water and milkshake
General function	Jog/Clean
	manual reserve

Reminder: The illustrations of products, accessories, user interface, etc. in the manual are schematic diagrams and are for reference only. Due to product updates and upgrades, the actual product may be slightly different from the schematic diagram, please refer to the actual product.


Use

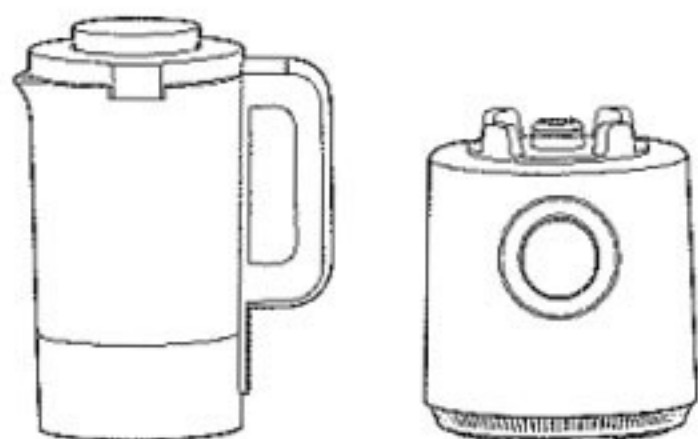


1. Remove all packaging, clean the charging cover, cup cover and mixing cup. The outside of the base can be wiped with a dry cloth. Do not soak the base, mixing cup, power cord and any other parts that use electricity during work. Do not shower directly. The base and the bottom of the mixing cup.



2. Clean the ingredients to be cooked, cut them into 5 cm pieces, cut the meat into strips and remove the tendons, and put them into the mixing cup. The ratio of ingredients to water can be found in "Recipes" on page 9.

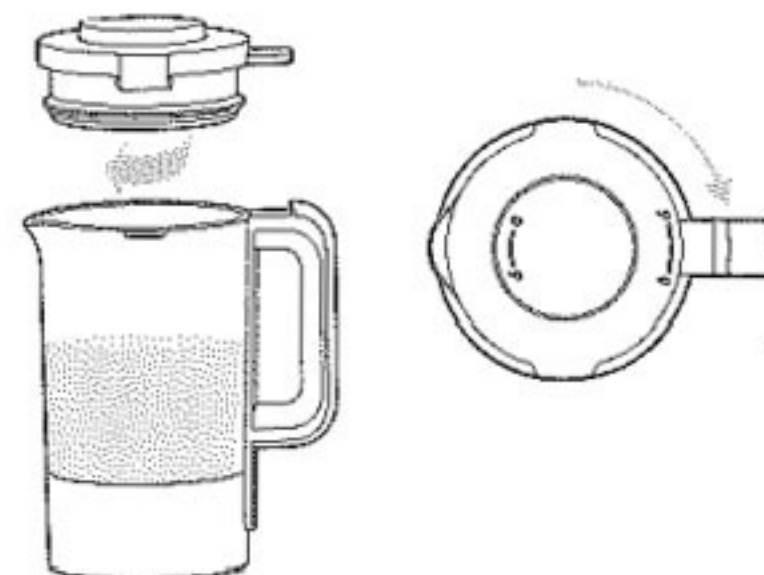

3. Install the feeding cover on the cup cover, and turn the cup cover clockwise to lock it with the mixing cup.

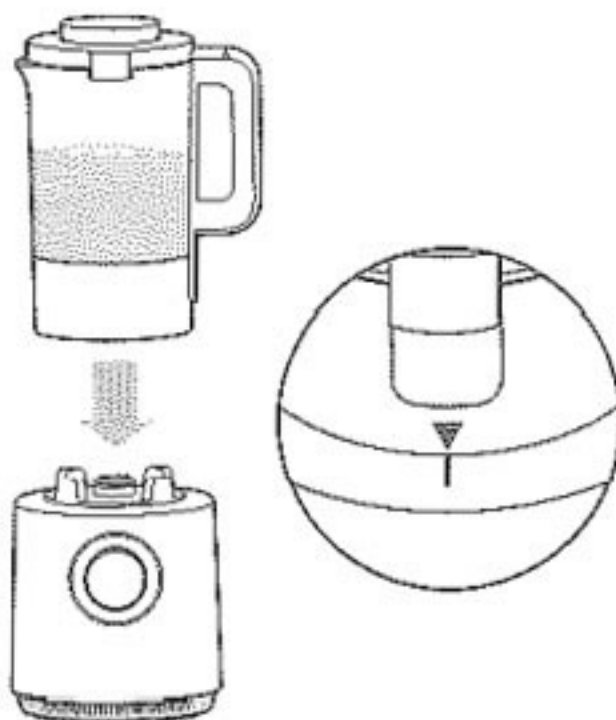

4. The mixing cup is correctly placed on the base, and the small triangle below the handle is aligned with the vertical line on the base. Be sure to place the stand on a stable surface.




5. After the power is applied, press the knob to enter the function selection interface, and turn the knob left and right to switch. After selecting the function, press the screen to start cooking.




6. During cooking, press the screen to stop working, press again to continue cooking, or turn the knob to the left and press the screen to exit the current function.

Use

Measuring cup use

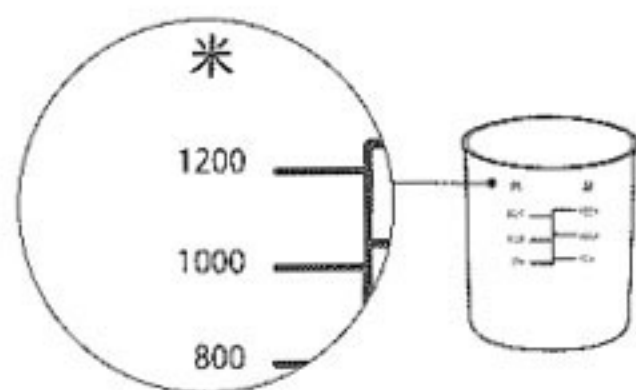

The scale on the measuring cup corresponds to the scale that needs to be reached when adding water to the mixing cup when cooking the corresponding ingredients. For example, when making rice paste, when the measuring cup reaches the 800mL mark, you need to add water to the mixing cup to the 800mL hot drink mark for cooking.

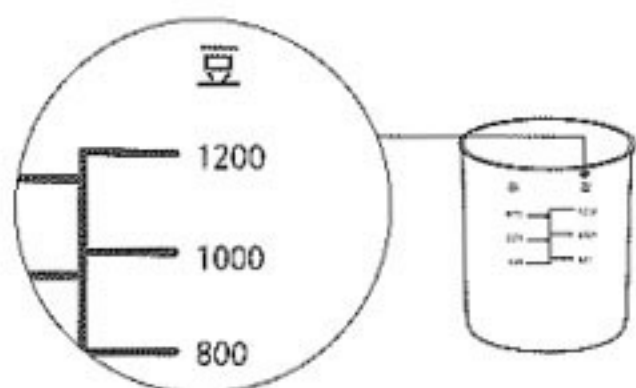

To make soymilk, when the measuring cup reaches the 800mL mark, add water to the mixing cup to the 800mL hot drink mark for cooking.

Maintenance

Clean

1. Be careful not to be scalded by the residual heat, please wait for the mixing jar to cool before cleaning.
2. After the mixing cup is finished pouring out the drink, please add water immediately, and use the "jog" working method for many times, which can better clean the mixing cup.
3. Disconnect the power supply, the outside of the base can be wiped with a dry cloth, do not soak the base,) mixing cup, power cord and other parts that use electricity in work.
Do not shower the machine base and the bottom of the mixing cup directly to prevent leakage or damage to the device.
4. When cleaning, please rinse the inside of the mixing cup and accessories with clean water, and wipe dry. The blade is very sharp. Be careful with the blade when cleaning to avoid cuts.
5. Do not use abrasive cleaners or corrosive liquids (such as gasoline or acetone, etc.) to clean the product.
6. If the parts are stained by fruit and vegetable juice, add a few drops of edible oil to wipe before rinsing, which can better remove the stain. After rinsing the parts with clean water, dry them thoroughly.
7. When the residues in the cup and bucket dry into hard lumps that are difficult to remove, add an appropriate amount of water to soak, wait for 0.5-1 hours to soften, and then clean and wipe it clean.
8. When the bottom of the stainless steel heating plate is not cleaned properly for many times, a light brown adhesion layer accumulates on the bottom. At this time, you can soak it with water for a period of time, and then use a slightly hard cloth to get white vinegar, and let it go with moderate force. Bottom textured swivel wipe clean.
9. Do not expose the product, power cord and packaging accessories to the sun.

Maintenance

1. This product should be used frequently to keep the motor dry.
2. If it is not used for a long time, please store this product in a dry and ventilated place to prevent the motor from getting damp and affecting the use.

Cleaning method after pasting the bottom

Cleaning method after paste bottom 1	The wall breaker should not be placed for too long before cleaning after use, otherwise the residue will adhere to the surface of the chassis, and it will be difficult to clean.
Cleaning method after paste bottom 2	Some drinking water will cause bean paste and rice paste food to condense into sticky lumps after cooking, mainly because there are too many minerals in the water. Scrub the bottom surface directly with a brush or scouring pad after water.
Cleaning method after paste bottom 3	Add a small amount of water and 2 tablespoons of baking soda, add white vinegar and water in a ratio of 1:10, soak for 1 hour, select the highest gear in manual mode, stir for 1 minute, and then directly use Maoju or scouring pad on the bottom surface.

Quick setup

This product can be controlled through the Mijia APP, supports the MIUI system, is compatible with the Mijia intelligent platform, and can be interconnected with other products.

1. Download the APP
Search for "Mijia" in the app store or scan the QR code below to download and install the Mijia APP.



2. Add a device
Open the Mijia APP home page, click "+" in the upper right corner of the page, and add a device according to the APP prompts. After the addition is successful, you can find this device in the home page list. Tip: Due to the upgrade and update of the Mijia APP, the actual operation may not match this description. Please follow the instructions in the current Mijia APP

3. Reset the W-Fi
When the W-Fi fails or the router is replaced, and it is necessary to reconnect to the Wi-Fi, please remove the mixing cup, the screen will display "please put the cup", press and hold the screen for 3 seconds, The orange light ring is always on, the screen displays "Wi-Fi reset", press the screen to reset the Wi-Fi, and then reconnect according to the device and APP prompts.

Features

After connecting to the power supply, the screen will display "Soybean Milk", and turn the knob to the right to select other cooking functions. When the screen displays "Dough Soup", you can start cooking soup-like beverages. When you need to exit the current mode, please refer to the "Soybean Milk" operation method.

Model	How to operate
Soy milk	After connecting the power supply, the screen displays "Soy Milk", press the screen to start cooking soy milk drinks. After starting to work, pressing the screen will stop working, and pressing the screen again will continue to work.
Rice paste	After connecting the power supply, the screen will display "soy milk", and turn the knob to the right to select other cooking functions. When the screen displays "rice paste", press the screen to start cooking rice paste drinks. When you need to exit the current mode, the method can refer to the "Soybean Milk" operation method.
Thick soup	After connecting to the power supply, the screen displays "Soybean Milk", and turn the knob to the right to select other cooking functions. When the screen displays "Soup", press the screen to start cooking soups. When you need to exit the current mode, please refer to the "Soybean Milk" operation method.
Fruit and vegetable juice	After connecting to the power supply, the screen will display "Soybean Milk", and turn the knob to the right to select other cooking functions. When the screen displays "Fruit and Vegetable Juice", press the screen to start cooking fruit and vegetable juice drinks. When you need to exit the current mode, the method can refer to the operation method of "Soybean Milk".
Milkshake	After connecting to the power supply, the screen displays "Soybean Milk", and turn the knob to the right to select other cooking functions. When the screen displays "Milk", press the screen to start cooking milkshakes. When you need to exit the current mode, the method can refer to the operation method of "Soybean Milk".
Sauce	After connecting to the power supply, the screen displays "Soybean Milk". Turn the knob to the right to select other cooking functions. When the screen displays "Milk Sound", press the screen to start cooking milkshakes. When you need to exit the current building, the method can refer to the "Soybean Milk" operation method.
Jog/Clean	The "jog/clean" function is generally used for food not fully stirred, and then stirring or cleaning the blender in a short time. After connecting the power supply, the screen will display "Soybean Milk", turn the knob to the left, the screen will display "Jog/Clean", press and hold the screen to turn on the "Jog/Clean" function and let go
Manual	After connecting the power supply, the screen displays "Soybean Milk", turn the knob to the right to select "Manual", press the screen to enter the speed setting, and turn left and right to set the speed. After setting the speed, press the screen to start the work. During the work, you can rotate the knob to adjust the speed. After the set program is completed, the work will stop. When you need to exit the current mode, you can turn left to display "Exit" or press the screen, turn left to select "Exit", and then press the screen to exit.

Model	How to operate
Reserve	After connecting the power supply, the screen displays "Soybean Milk", turn the knob to the right to select "Reservation", press the screen to enter the reservation setting, and turn right to select the reserved cooking function. Press the screen to select the desired cooking function and rotate to adjust the preset time. Quickly rotate to adjust the "hour", and slow to adjust the "minute". Then press the screen to determine the completion time of the reserved cooking. The maximum reservation time is 24 hours. After the appointment is successful, press the screen to choose to exit the appointment. Appointments can only be selected for the hot drink function that is commonly used.
Time calibration	After connecting the power supply, remove the blender jar from the stand, and the screen displays "please place the cup", press and hold the screen for 3 seconds at this time, when the orange light ring is on and the screen displays "Wi-Fi reset", you can turn right Select Time Calibration. At this time, pressing the screen will display the current time of the Mijia Blender. You can turn the knob to adjust the current time, fast spin to adjust "hour", and slow spin to adjust "minute". After setting the time, press the screen to complete the time calibration.
Confirm boiling point	After connecting the power supply, remove the blender jar from the stand, and the screen displays "please place the cup", press and hold the screen for 3 seconds at this time, when the orange light ring is on and the screen displays "Wi-Fi reset", you can turn right Select "Confirm Boiling Point" and press the screen, reposition the blender jar on the stand, and follow the prompts to start the boiling point calibration procedure. Do not open the lid or move the mixing jar during the calibration process. When the screen displays "Confirmed" and a beep sounds, the boiling point calibration procedure is completed. After the boiling point calibration is completed, the machine automatically adapts to the altitude of the region to ensure that the nutrients of the ingredients are fully released to prevent problems such as undercooking, overflowing, and bottoming of the ingredients caused by the difference in altitude. If you move the wall breaker to an area with a large altitude change, please repeat this operation.
Reset	After connecting the power supply, remove the blender jar from the stand, and the screen displays "Please place the cup". Press and hold the screen for 3 seconds at this time. When the orange light ring lights up and the screen displays "Wi-Fi reset", you can turn right Select "Factory Reset" and press the screen to reset to factory settings, clear saved data and reset Wi-Fi.

Use Note

1. If you need to add ingredients during the operation of the non-heating function, you can open the feeding cover and put in; when using the heating function, it is strictly forbidden to open the feeding cover to avoid burns.
2. Use the heating function. When the food is heated to boiling (the countdown starts), please do not terminate the program. If it is terminated by mistake, please do not directly re-select the heating function to continue the production, so as to avoid the hot food being repeatedly boiled or overflowing, and the bottom will be smashed. In this case, it is recommended to change the ingredients and select the function again, or use the pot to cook and then use the "jog" mode to stir and break the food.
3. The functions of soy milk, rice cereal, thick soup, fruit and vegetable juice, milkshake, and mango are the common functions set at the factory. Other functions need to be adjusted to the common functions through the mobile APP. Mobile APP operation.

Recipe

Drink name	Ingredients	Steps
Fruits and vegetable juice	1 kiwi, 50g pineapple, 1 apple, 250mL cold water, 3 ice cubes.	<ol style="list-style-type: none"> 1. Peel and cut kiwifruit, peel and cut pineapple, peel and cut apples. 2. Put the ingredients into a mixing jar, and add 250mL of cold water and ice cubes. 3. Tighten the lid of the cup, connect the wall breaker to the power supply, and select the "fruit and vegetable juice" function, and the production is completed in about 3 minutes.
Soy milk	50g soybean, 3 red dates, 10 wolfberries, 800mL water.	<ol style="list-style-type: none"> 1. Rinse the red dates, soybeans, wolfberry and other ingredients and set aside. 2. Put the ingredients into a mixing jar and add 800mL of water. 3. Close the lid tightly, connect the power supply to the wall breaker, and select the "Soybean Milk" function. The production is completed in about 27 minutes.
Rice paste	Rice 50g, pumpkin 50g, water 800mL.	<ol style="list-style-type: none"> 1. Rinse the rice and pumpkin into pieces and set aside. 2. Put the ingredients into a mixing jar and add 800mL of water. 3. Tighten the lid of the cup, connect the wall breaker to the power supply, and select the "rice paste" function. The production is completed in about 30 minutes.
Thick soup	Crucian carp 180g, lotus root 100g, 750 mL water, a little salt, a little ginger.	<ol style="list-style-type: none"> 1. Wash the crucian carp, lotus root and other ingredients, cut into sections and set aside. 2. Put the crucian carp, lotus root and ginger into a mixing cup and add 750mL of bay water. 3. Tighten the lid of the cup, connect the wall breaker to the power supply, and select the "dummy soup" function. After about 30 minutes, add a little salt.
Corn juice	Corn kernels 200g, water 750mL.	<ol style="list-style-type: none"> 1. Wash the fresh corn kernels and set aside. 2. Put the corn kernels into a mixing jar and add 750mL of water. 3. Close the lid tightly, connect the wall breaker to the power supply, and select the "Corn Juice" function, and the production is completed in about 25 minutes.
Taste	30g of tree rice, 100g of cooked vegetables, onion 30g, whitebait 20g, 750mL of water.	<ol style="list-style-type: none"> 1. Wash the ingredients and set aside. 2. Put the ingredients into a mixing jar and add 750mL of water. 3. Tighten the lid of the cup, connect the wall breaker to the power supply, and select the "porridge" function, and the production is completed in about 30 minutes.

Drink name	Ingredients	Steps
Smoothie	8 grapes, 2 mangoes, and 8 ice cubes.	<ol style="list-style-type: none"> 1 Wash and peel the grapes, peel the mangoes, peel and cut into pieces. 2. Put the ingredients into the blender jar. 3. Tighten the lid of the cup, connect the wall breaker to the power supply, and select the "sandwich" function, and the production is completed in about 1 minute. When working, open the lid and stir properly with a stirring rod to mix the
Milkshake	Half carrot, 100g pineapple, 300mL milk.	<ol style="list-style-type: none"> 1. Wash the carrots and cut them into pieces. Peel the pineapples, wash them and cut them into pieces. 2. Put the ingredients into the cup and add 300mL of milk. 3. Tighten the lid of the cup, plug in the wall breaker, and select the "milk shake" function. The production is completed in about 1 minute.

The recipes are for reference only, more recipes can be checked through the mobile APP. The recipe can be fine-tuned according to personal taste. The recommended ratio of ingredients to water is 3:2. The cooking time in the manual is for reference only, and the specific display on the machine side shall prevail.

Troubleshooting

Fault phenomenon	Cause of failure	Solution
Overflow	<ol style="list-style-type: none"> 1. Too much or too little food 2. Too much or too little water 3. Wrong selection of function block 4. Machine failure 	<ol style="list-style-type: none"> 1. Put in the right amount of ingredients 2. Please add water to the correct water level 3. Select the function block according to the manual 4. Please contact the after-sales customer service
Bottom	<ol style="list-style-type: none"> 1. Too much food 2. Misplaced food 3. Too little water 4. The bottom of the cup is not cleaned 5. Wrong selection of function block 6. The machine itself fails 	<ol style="list-style-type: none"> 1. Put in the right amount of ingredients 2. Do not put flour and other ingredients with serious paste bottom 3. Please add water to the correct water level 4. Before use, please clean it 5. Select the function block according to the manual 6. Please contact after-sales customer service
Unbreakable food	<ol style="list-style-type: none"> 1. Put too much or too little ingredients 2. Too much or too little water 3. Misselect function block 4. The machine itself fails 	<ol style="list-style-type: none"> 1. Put in the right amount of ingredients 2. Please add water to the correct water level 3. Select the function block according to the manual 4. Please contact the after-sales customer service
End of work, The ingredients are not hot	<ol style="list-style-type: none"> 1. Excessive amount of ingredients 2. Misplaced ingredients 	<ol style="list-style-type: none"> 1. Select the function block according to the manual 2. Please contact after-sales customer service

Fault phenomenon	Cause of failure	Solution
Display does not light up	<ol style="list-style-type: none"> 1. The power cord is not plugged in 2. The machine itself fails 	<ol style="list-style-type: none"> 1. Check the power cord and ensure that it is plugged in properly and powered on. 2. Please contact after-sales customer service
Turning the knob does not respond when the machine is working	<ol style="list-style-type: none"> 1. The machine is working and cannot turn the knob to select, press the screen can be paused 	<ol style="list-style-type: none"> 1. It is a normal phenomenon
The display is on, but the product does not work	<ol style="list-style-type: none"> 1. Press the select function and do not press the confirmation to start working 2. No water is added to the cup, overheating protection 3. A buzzer alarm occurs during the working process 4. The machine itself fails 	<ol style="list-style-type: none"> 1. Select the function again, press the screen to start after confirming the function 2. Please add water to the correct water level, restart after cooling 3. Unplug the power first, then turn on the power and operate to the normal working steps. 4. Please contact after-sales customer service
Working sound	<ol style="list-style-type: none"> 1. Motor whipping sound 2. Abnormal noise, abnormal motor 	<ol style="list-style-type: none"> 1. It is a normal phenomenon 2. Please contact after-sales customer service
Not reaching boiling point	<ol style="list-style-type: none"> 1. The lower boiling point in the plateau area causes overflow 	<ol style="list-style-type: none"> 1. Follow the "Confirm Boiling Point" in the function introduction of the manual to operate

1. Please check whether the power supply is connected well, and whether the mixing jar and lid are in place. If the product has abnormal conditions such as: abnormal noise, smell, smoke, etc., immediately cut off the power supply and stop using.