 
 


Safety instructions



Warning

Failure to follow the instructions for use can be dangerous



Notice

Illegal operation may damage your items, property, and even endanger your personal safety.

- Please read the operation instructions of this manual carefully when using, and keep it properly for future reference.
- Please strictly abide by the following signs, ignoring the signs or operating errors may cause serious accidents or injury to others. So please follow the instructions below. (This product is only suitable for household use)
- If the power cord is damaged, in order to avoid danger, it must be replaced by the manufacturer or its maintenance department or similar full-time personnel.

Notice

	Before using this product, please read the instructions in this manual carefully.		The power supply used should be a voltage of 220V and a current of 15A or more.
	Do not use this product beyond its functional scope.		Do not allow children to operate this product.
	Do not let the power cord touch sharp edges.		Do not let the power cord touch sharp edge or hot surfaces.
	This product must be placed on a stable and reliable work surface for operation.		Hold the plug when unplugging, do not pull on the power cord.
	Do not use outdoors.		Do not immerse this product in water or any other liquid.
	To ensure safety, do not disassemble this product without authorization. If there is any abnormality, please send it to the service center or distribution office of the company, and it will be repaired by qualified maintenance personnel.		

Safety precautions

■ Special note

In order to ensure the safety of use and avoid injury and property damage to you and others, please be sure to abide by the following safety precautions.

Failure to comply with safety warnings and incorrect use may lead to accidents.

This product does not consider the following situations:

- Use of appliances by unattended young children and persons with disabilities
- A case of a child playing with an appliance.

⊘ Indicates [prohibited] content

- No-load operation or overload use is strictly prohibited when this product is working. When this product is working, it is forbidden to move the product or touch the moving parts to avoid accidental injury.
- It is forbidden to hang the power cord on sharp objects and cannot be connected to movable objects.
- It is forbidden to use this product on inclined countertops or unstable countertops.
- It is forbidden to add hot ingredients for stirring (no more than 80°C).
- Do not use inferior plug-in adapters to avoid fire and personal injury.
- It is forbidden to place the product too close to the stove to avoid damage to the product or cause fire and personal injury.

ⓘ Indicates [mandatory] content

- Please do not let children operate and use it alone, make sure that the product is not used as a toy, and keep it out of the reach of the baby, the elderly or people with disabilities, as well as people with no experience in using it, should use this product under supervision and guidance.
- If the plug or other parts are damaged, you must stop using this product and go to the designated repair point to ask professionals to replace or repair it to avoid injury.
- Before disassembling or debugging any parts of the product, please make sure that the product is in a power-off state.
- If the power cord is damaged, in order to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or similar department.
- Please do not use accessories and accessories other than this product to avoid fire and personal injury.
- Please do not run this product unattended.

 
⚠ Matters that may cause casualties

- Please confirm whether the voltage is consistent with the specifications of this product (220V-50Hz) before use, so as to avoid product safety hazards and damage.
- The working time of this product must ensure that the continuous operation does not exceed 2 minutes. During operation, if the machine base is found to be overheated, it should be stopped for about 20 minutes, and the operation can be continued after it cools down.

⚠ Items that may cause minor injury or property

- This product is equipped with an overheating protection device. When it is used abnormally or the motor is seriously overloaded, the product will automatically shut down. If it still cannot be started after 30 minutes of protection, the product must be sent to the company maintenance network for repair, please do not disassemble the machine by yourself.
- After using the product, clean the parts that come into contact with food to avoid long-term use of residual corrosion and odor.
- If the product is stuck during use, please turn off the power supply immediately, unplug the power supply, and remove the capacitor. Remove the material stuck in the blade and wait for the motor to cool before continuing to use it.
- After the product is used, please unplug the power supply and clean the product in time.
- Before using the product, please make sure that the table and table are clean and the oil stains are cleaned up in time.
- Please keep the optimal distance between this product and other kitchen appliances at least 30 cm.

Parts schematic

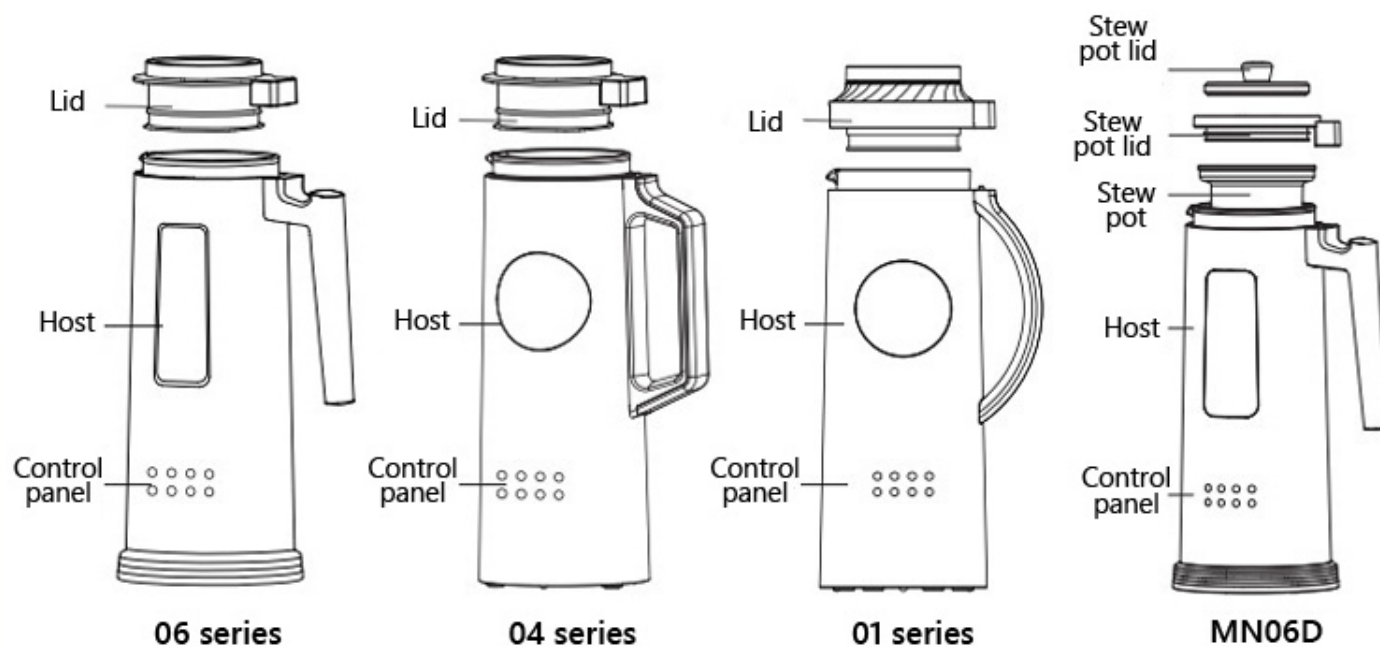

Remarks: The MN06D model is equipped with a dedicated cooking plate, and the heating function can be used to cook the ingredients.

Attachment:



Measuring cup



Brush

Part name	Function introduction
Cup lid	Prevent the ingredients from cooked out, and the lid can be installed in place before the product can be started.
Host	A container for ingredients, containing a blade for crushing ingredients, and a power source for the product
Control panel	Control the way the machine works
Measuring cup	Used to measure dried beans, rice and other ingredients
Brush	For cleaning products



Attention to use:

Due to the differences in the appearance of the products, the above picture is for reference only. For details, please refer to the actual product in the packaging box.

 
Instructions for use

Instructions before use:




1. The temperature of food and liquid should not exceed 80°C, and the capacity should not exceed the maximum scale.
2. The outside of the main unit can be wiped with a wrung cloth. Do not put the main unit in water or other liquids, and do not rinse it under water or other liquids to prevent leakage or damage to the device.

3. When cleaning, please rinse the cup body and accessories with water and wipe dry; the blade is very sharp, be careful with the blade when cleaning. Sharp to avoid cuts, protective gloves can be worn.
4. Do not use steel balls, abrasive cleaners, or corrosive liquids (such as gasoline or propane) to clean the product.
5. When beating soy milk, the maximum capacity should not exceed the maximum tick mark;
6. Please wash the ingredients and cut them into pieces with a side length of not more than 15 mm.

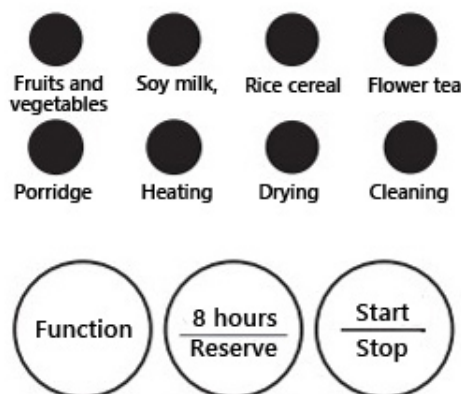■ Control panel description:



(It is only a schematic diagram, subject to the actual product.)

	<p>Click the "Function" button to switch between "fruit and vegetable", "soybean milk", "rice paste", "flower tea", "porridge", "heating", "drying" and "cleaning".</p>
	<p>Click the "Function" button to select the desired reservation function, and click the "8 hour reservation" button to set the reservation. The default is 8 hours, which cannot be adjusted. After confirmation, press "Start/Stop" to start the program.</p>
	<p>After selecting the desired function, you can click "Start/Stop" to start the program, and click again to start the program. Cancel the function and return to the standby interface.</p>
<p>Long press to stir</p>	<p>Long press and stir and press and hold "8-hour appointment" and do not let go. The machine runs continuously at the highest speed, and stops when you let go, and the longest operation is 30S.</p>

- Remarks:
1. After the non-reservation state function is selected, the corresponding function indicator flashes, and the other indicators are on for a long time. After startup, the function indicators are on, and the other indicators are off.
 2. In the reservation state (soymilk, scented tea, porridge), after selecting the function, click the reservation, the function indicator flashes, and the other indicators are off, indicating that it has entered the reservation setting state. The function indicator is displayed on the marquee, and after the appointment countdown is over, the display is consistent with the non-reservation status.


Serial number	Mode	Use
1	Fruits and vegetables	Make fruit juice, carrot juice or mixed juice
2	Soy milk	Make a variety of soy milk based on soybeans and match the taste according to the recipe
3	Rice cereal	Make rice cereal in recipes
4	Flower tea	Make various flower teas
5	Porridge	Make porridge in recipes
6	Heating	Used to heat drinks, automatically keep warm for 1h after heating and boiling Remarks: This function can be used with a dedicated USB flash drive
7	Drying	Used to dry the moisture in the container
8	Cleaning	Suitable for cleaning cup body and other operations
9	8 hours appointment	Set appointment function
10	Long press to stir	Used to customize the stirring function
11	Start/stop	Used to start or stop functions

Note:

Go to the previous step. If the lid of the cup is opened during the operation of the machine, the program will be terminated immediately, and the program will not continue after it is closed again.

How to use

 
1. Cut the ingredients into pieces about 15mm (like the size of peanuts).
(Cut the meat and remove the tendons)

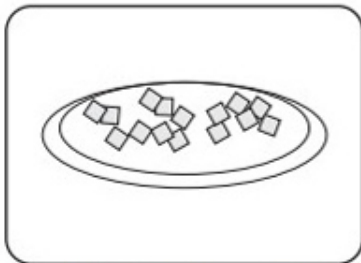


2. Use a small measuring cup, a flat cup of rice or beans and 300 mL of water. You can refer to the recipe ratio or measure the appropriate amount of ingredients according to your personal taste.



 
3. Pour the measured ingredients into the mixing cup. (Note that there should be no other foreign objects in the mixing cup)

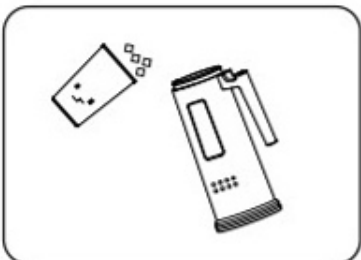

 
4. Add an appropriate amount of water to the mixing cup. (Note: the water level cannot exceed the maximum water level line, when using a special stew pot, the water level should follow the stew pot water level line)

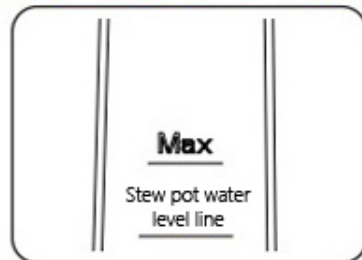

 
5. Put the lid on the main unit. (The host has a cover opening protection device. If the cup cover is not installed in place, the product will not work.)

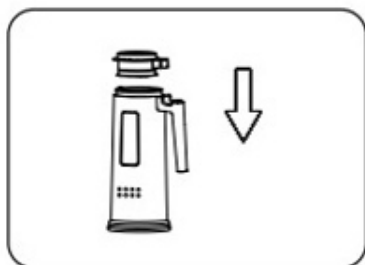

 6. Plug in the power cord, and when the power is turned on, the product beeps once and the indicator lights are all on.

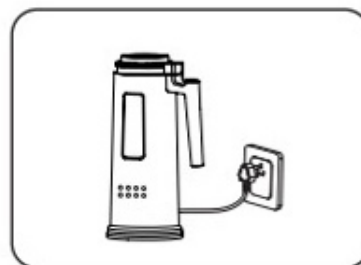

 7. Click the "Function" button to select the corresponding function. (For example: rice paste, use the heating function when using a special stew pot)


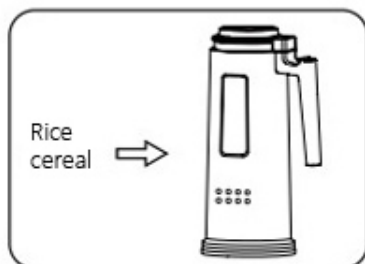


8. Click the "Start/Stop" button to start working! (It is a normal phenomenon if there is a sound of fast and slow at work)





9. When the work is completed, the buzzer sounds three times, and the machine returns to the standby state.

  10. Unplug the power cord and open the lid of the cup (pay attention to steam gushing out when opening the lid to prevent burns)

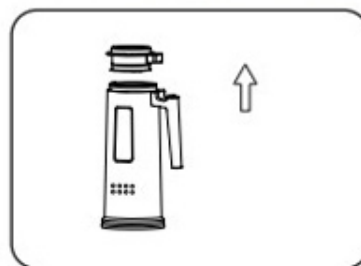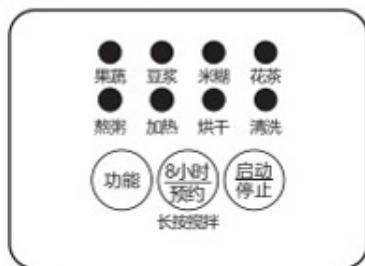

11. Pour out the slurry and add seasonings according to personal taste. (Do not be too hasty when pouring the slurry to prevent the liquid from splashing)

  12. Clean the inside of the host in time, and clean the outer casing with a cloth

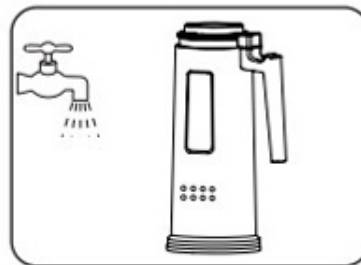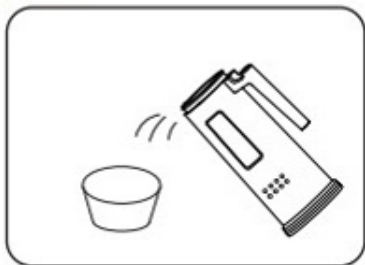


How to use the stew pot:


1. Put the prepared ingredients into the special stewing pot and add an appropriate amount of drinking water;



 2. Add an appropriate amount of water to the mixing cup and put it between the water level of the stewing cup (note: it cannot be lower or higher than the water level of the stewing cup).

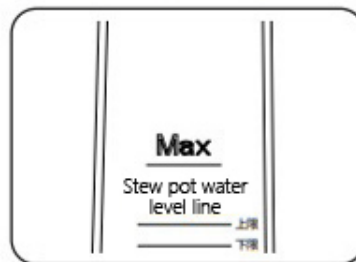

 3. Cover the stewing pot bracket on the main unit (the main unit has a cover opening protection device, if the cup cover is not installed in place, the product will not work) Warm reminder: The stew pot holder can only be used with the stew pot.

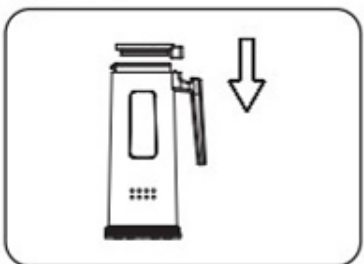


4. Put the stewing cup filled with ingredients into the main unit and cover the stewing cup.



5. Plug in the power cord, when the power is turned on, the product beeps once and the indicator lights are all on.



 
6. Click the "Function" button to select the heating function.

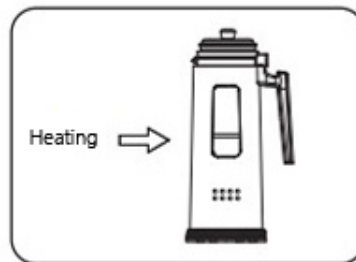


7. Click the "Start/Stop" button to start working! (It is normal for there to be a sound that goes up and down during work.)



 
8. When the work is completed, the buzzer sounds three times, and the machine returns to the standby state.

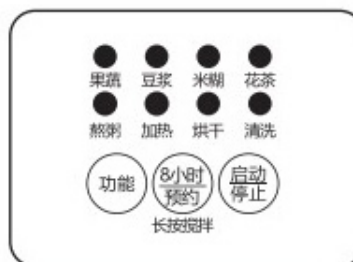

 
9. Unplug the power cord, hold the ears on both sides of the stew pot bracket, take out the stew pot together with the bracket, and gently place it on a flat table with a thermal insulation pad (be careful when taking out the steam to prevent burns)

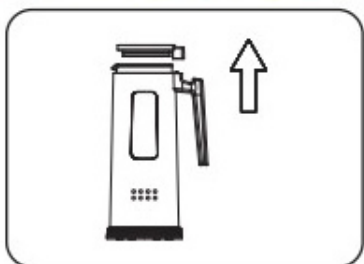

 10. Open the lid of the stewing pot (pay attention to the steam pouring out when opening to prevent burns), wrap the stewing pot with heat-insulating cloth and pour out the slurry (pay attention to prevent burns)

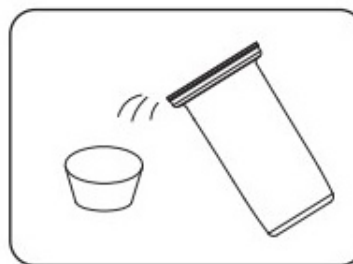

 11. Clean the inside of the host in time, and use a cloth to clean the shell.

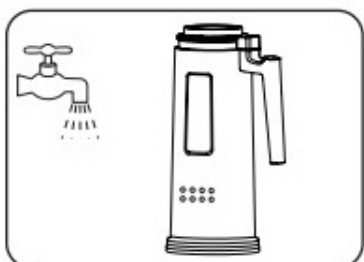

Note

1. When making paste, soup, etc., you must select the corresponding function button, otherwise the food produced will have bad taste, not cooked through, etc., and will cause overflow or paste bottom in serious cases!
2. If the functions of "fruit and vegetable", "soybean milk", "rice paste", "scented tea" and "porridge" have a function error and need to switch the function, please click the "start/stop" button to cancel the current function. After changing the ingredients, re-select the correct program to start.
3. The ingredients in the recipe are prepared according to the standard water level. When using, please adjust the total amount of ingredients according to the amount of water and the type of food. The heating and cold beverage functions cannot exceed the maximum scale.
4. When making fruit and vegetable accessories, please remove the core of the ingredients before putting them into the mixing cup, and add an appropriate amount of drinking water or milk.
5. Do not use this product to directly heat viscous liquids such as milk, soy milk, cold rice cereal, etc., otherwise it will cause the "paste bottom" to burn and produce peculiar smell.
6. During the working process of the machine, after the liquid in the mixing cup boils, please be careful of the water vapor and splashed hot water from the spout. Do not open the lid of the cup during work.
7. Do not add seasonings (such as granulated sugar, brown sugar, etc.) into the cup during the production process of the machine, so as to avoid the seasonings from sticking to the bottom of the mixing cup when heated.
8. Before turning on the power, please make sure that the cup cover is installed in place.
9. When the product is powered on, it is strictly forbidden to put your hands or sharp hard objects into the mixing cup to avoid injury or damage to the product.

Measuring cup instructions for use



1. When making rice paste/porridge, measure a flat cup of rice with a measuring cup, and add water to the maximum scale position Max
300mL
2. When making soymilk, use a measuring cup to measure a flat cup of dry beans, and add water to the maximum scale. Max
300mL

Cleaning and maintenance

Clean

1. After the main unit pours out the juice, immediately add water, and use the "cleaning" working method to better clean the glass in the main unit.
2. Disconnect the power supply, and wipe the outside of the host with a wrung cloth. Do not put the host in water or other liquids to prevent leakage or damage to the device.
3. When cleaning, please rinse the cup body and accessories with clean water, and wipe dry; the blade is very sharp, be careful not to cut the blade when cleaning, you can wear protective gloves.
4. Do not use steel balls, abrasive cleaners or corrosive liquids (such as gasoline or acetone) to clean the product.
5. If the parts are stained by fruit and vegetable juice, add a few drops of edible oil to wipe before rinsing, which can better remove the stain.
6. After rinsing the parts with clean water, dry them thoroughly.

Maintenance

1. This product should be used frequently to keep the motor dry.
2. If it is not used for a long time, please store this product in a dry and ventilated place to prevent the motor from getting wet.

Intelligent altitude recognition

- 1 In order to fully ensure the effect of ingredients, before using the machine for the first time, or when the machine is moved to an area with large changes in altitude, please follow the steps below: add water (do not add any ingredients) to the maximum mark. Put the blender and cup lid in place, put it on the main unit, and connect to the power source.



- 2 Press the "Function" and "Start/Stop" keys simultaneously within 10 seconds of power-on to enter the intelligent altitude recognition mode.



- 3 After the setting is completed, it will be whipped for a short time, and the indicator light in the display area will be displayed circularly in the way of marquee.



- 4 When the display returns to the standby state, the buzzer beeps three times, the altitude adaptation procedure is completed, please disconnect the power.



Note: The machine automatically adapts to the water temperature and the altitude and voltage of the region in real-time during the working process, and adjusts the function production program to the best state to ensure the full release of the nutrients of the ingredients, and prevent the ingredients from being undercooked, overflowing, and pasty due to changes in altitude and voltage. There is a large amount of water vapor in the process of boiling water, please pay attention to prevent scalding. The normal altitude range of the product is 0~2000 meters. After completing the intelligent altitude recognition, the machine has been adjusted to the optimal production program in the local environment and runs in this state.

■ Fault analysis and troubleshooting

Fault	Analysis of possible causes	Solutions
Light does not shine	Power cord is not plugged in	Check the power cord and make sure it is plugged in
Indicator flashes	After selecting the function, the start button is not pressed	After selecting the function, press the "Start/stop" button again
	The lid is not closed in place	Re-cover the lid of the cup, and it will listen after the lid is installed in place
No response to keys	The power-off interval is short, and the system is not reset	Power off for 3 minutes before powering on
	The product is already executing the program	Normal phenomenon
Unbreakable food	Add too much or too little water	Please add water to the correct water level
	The power supply voltage is too low	Available household voltage regulator
	Too many or too few ingredients	Please follow the recipe
Paste bottom	Cup not cleaned	Please clean the inside of the cup before using it
	Too much food	Please follow the recipe
	Press the wrong function key	Choose the correct function key

Recipe

Smart porridge	<p>Ingredients: Take a measuring cup, a flat cup of rice, 2 chestnuts (peeled and cut into small pieces the size of peanuts), the largest scale of water</p> <p>Practice: Wash all the materials and put them in the cup, select the "Rice period" button, and then press "Start/stop" button.</p>
Soybean milk	<p>Ingredients: Take a measuring cup, a flat cup of soybeans, and the largest scale of water soy milk</p> <p>Practice: Wash all the ingredients and put them in the cup, select the "Soy milk" button, and then press "Start/stop" button.</p>
Peanut soymilk	<p>Ingredients: Take half a cup of soybeans in a measuring cup, half a cup of peanuts in a measuring cup, and the largest scale of water</p> <p>Practice: Wash all the ingredients and put them in the cup, select the "Soy milk" button, and then press "Start/stop" button.</p>
Black sesame paste	<p>Ingredients: 10 grams of sesame seeds, 22 grams of sticky rice, the right amount of granulated sugar, the largest amount of water</p> <p>Practice: Wash all the ingredients and put them in the cup, select the "Rice paste" button, and then press "Start/stop" button.</p>

Note: The maximum scale of water refers to putting other materials first, and then pouring water to the maximum scale.