 
 




## Product Introduction

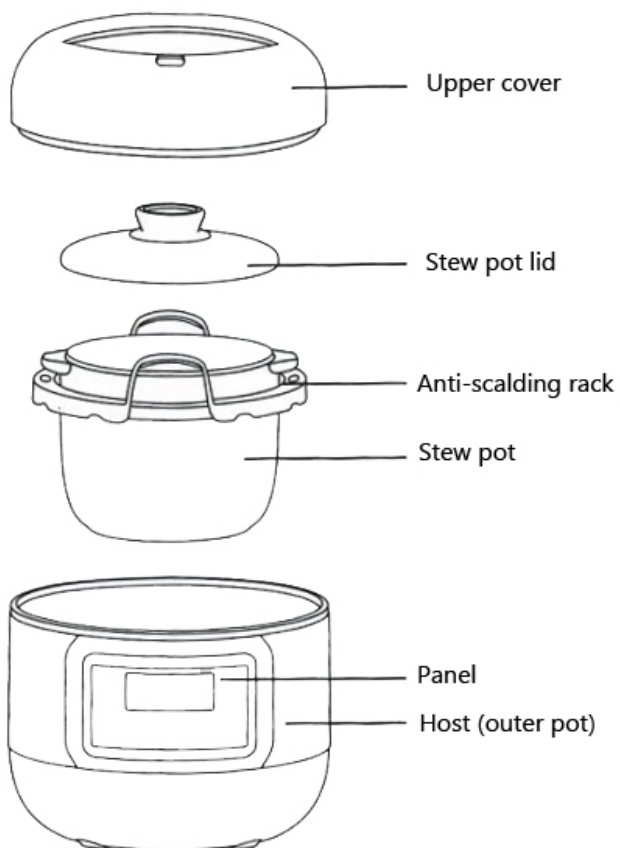

## Control panel

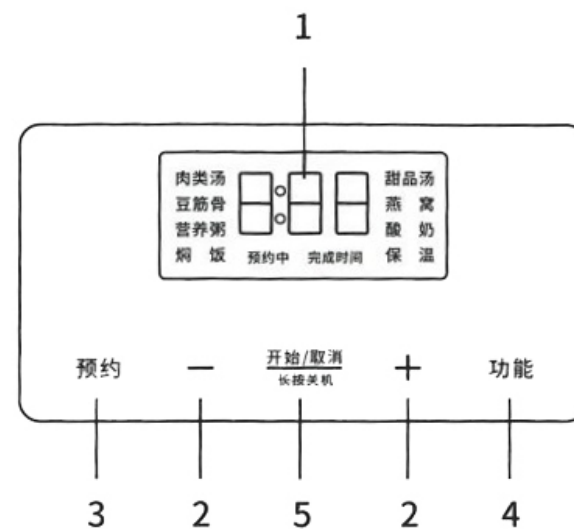

- 1 Digital time display
- 2 Time adjustment buttons
- 3 Reservation button
- 4 Function buttons
- 5 Start/cancel button






## Instructions for first use



### Need to know 1:

The main unit (outer pot) must be filled with water before the machine can work.


If no water is added to the main unit (outer pot), it will cause dry-burning power-off protection.

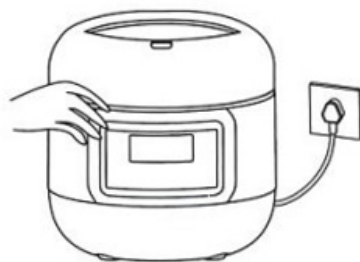

### Need to know 2:

If you want to stew directly, do not choose to make a reservation.

How long it takes to make an appointment means how long it takes for the machine to complete.

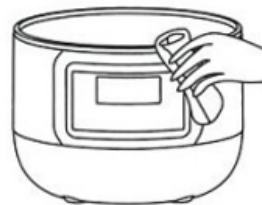

### Need to know 3:

After multiple uses, there is too much scale on the heating plate, which needs to be removed.

If the scale accumulates too much, it will cause dry burning and power failure protection.

Excluding the above points, the machine still cannot work normally, please consult customer service, we will patiently solve the problem for you.





## Steps to use




①

1. Put the cleaned ingredients into the stewing pot first, and then add an appropriate amount of water to the stewing pot as shown in Figure 1. It is recommended not to exceed 90% of the capacity of the stewing pot.



③

3. Then move the pottery as shown in Figure 3. Put the pure porcelain plate in the anti-scalding rack and put it Go to the host (outer pot) and cover it inside. Just cover it.

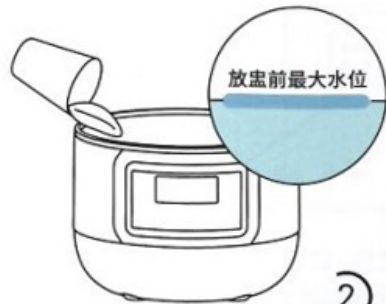

②

2. Add appropriate water to the main unit (outer pot) as shown in Figure 2, and refer to the type and amount of ingredients; be careful not to exceed the water level marked on the main unit (inner wall).



④

4. According to the type and amount of ingredients refer to the instructions used in this manual. After the setup is set up, the machine starts to work.








## Graphical function operation method

 When no reservation is required, the operation method to start stewing directly:

Take cooking nutrition for 4 hours as an example


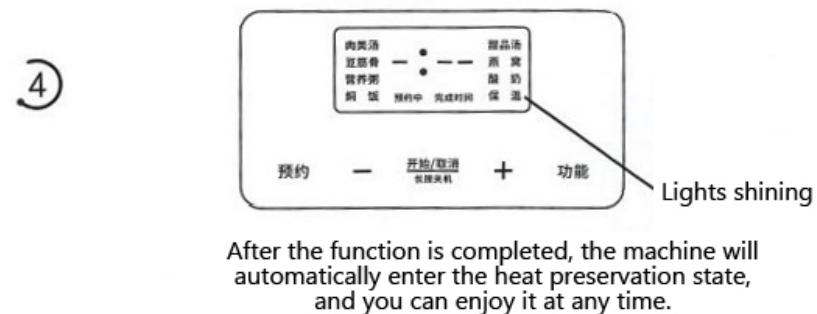
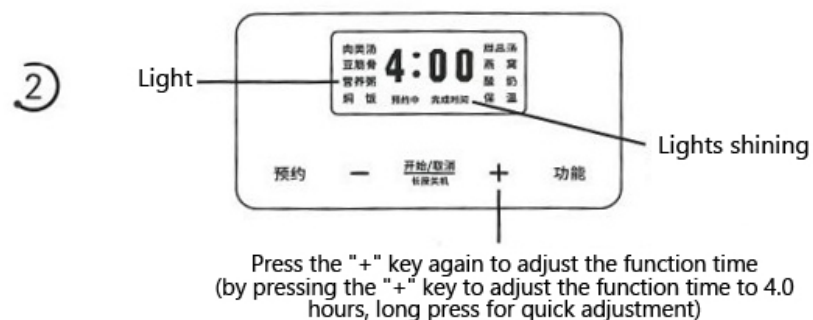
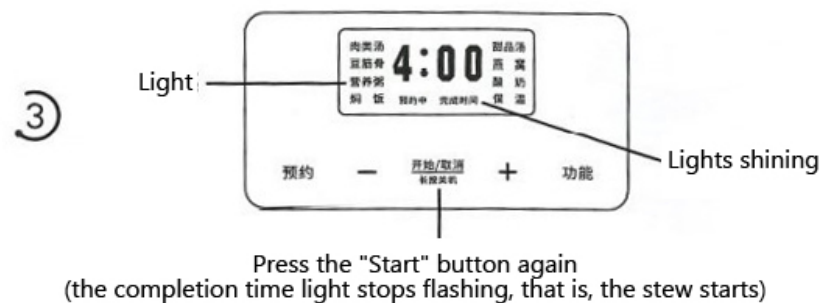




## Graphical function operation method

When it is necessary to make an appointment, the operation method of delaying the start of stewing:

Take the example of stewing nutritious porridge for 4 hours, now at 10 o'clock in the evening, and eat it at 7 o'clock in the morning

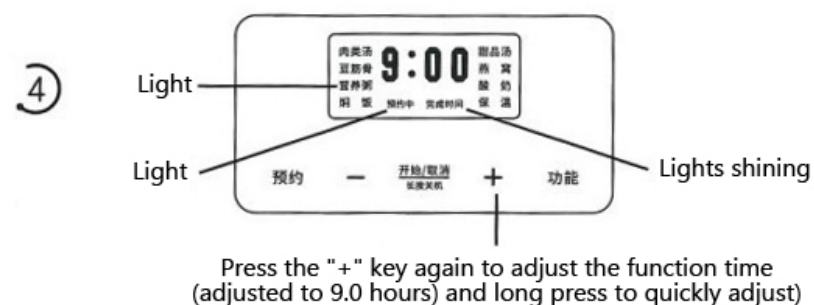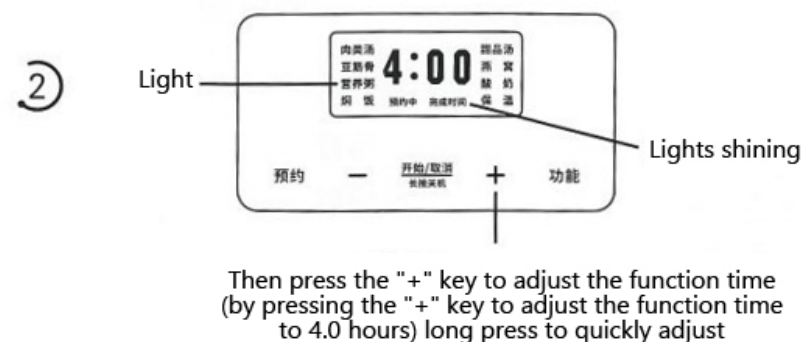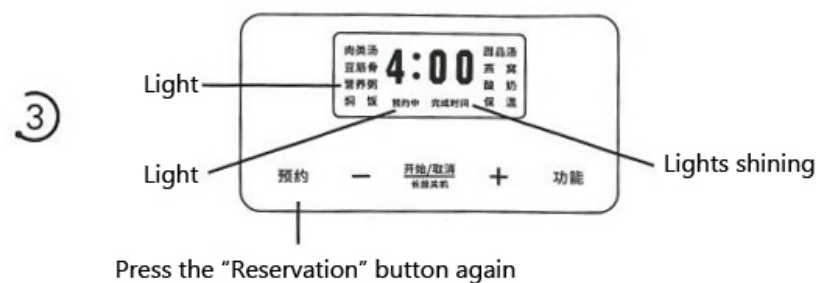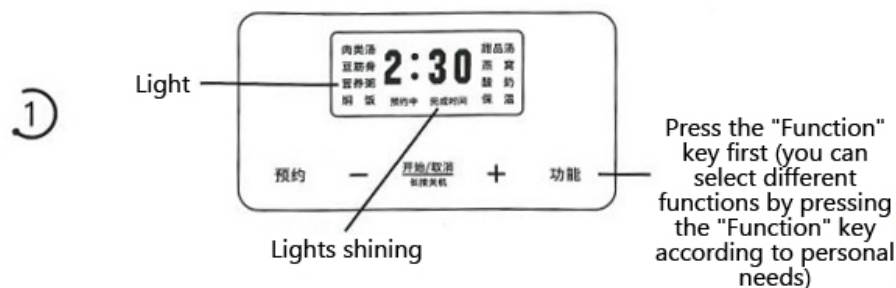





## Graphical function operation method

⑤




Press the "Start" button again (the completion time light stops flashing and enters the reservation state)  
(this 5-hour machine is in a countdown state, no heating)

⑥



Automatically enter the stewing work after 5 hours

⑦

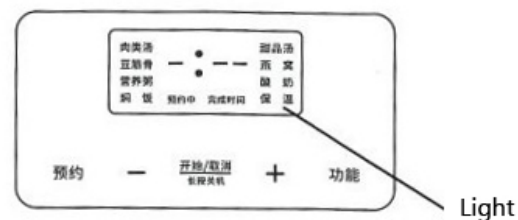

After 4 hours of stewing, it will automatically enter the heat preservation state (the food is just finished at 7:00 in the morning)

### Reminder:

Choose different stewing functions according to personal preferences. Due to the different characteristics of various ingredients, you should set an appropriate appointment time according to your life experience to prevent the ingredients from deteriorating due to the long appointment time.





## Precautions



### Usage restrictions

The normal working altitude range of the product is 0 meters to 2000 meters. The product should not be placed in an unbalanced, humid or near other fire source, heat source (such as a stove), and the distance is preferably more than 30CM. Do not place the product near devices that are susceptible to electromagnetic interference.



### During cleaning and maintenance

Appliances must not be immersed in or exposed to water. Do not use hard objects such as steel wool to clean. Do not use strong acids, alkalis or organic solvents for cleaning. Please use a soft cloth for cleaning.



### AC power cord

Please use only the supplied AC power cord.  
Disconnect the AC power cord from the AC outlet before performing maintenance work or moving. If the power cord is damaged, in order to avoid danger, it must be replaced by the manufacturer or its maintenance department or similar professionals.  
Do not excessively pinch, bend, or twist the AC power cord, or the core may pop out or break.



### Power considerations

Do not use the supplied AC power cord with any other device.  
It is forbidden to use power supply other than AC 220V to avoid fire and electric shock. Please be sure to unplug the power supply by holding the power plug part to avoid electric shock or short circuit and fire. When disconnecting the AC power cord, do not pull the AC power cord. Do not let children operate and use it alone, and place it in a place where infants and young children cannot reach it alone to avoid dangerous accidents such as electric shock and burns. Please do not insert or unplug the power plug with wet hands to avoid electric shock or injury. Please use a grounded socket with a rated current of more than 10A alone to avoid fire and other dangers.





## Precautions



### About the environment



### In use



### End of use



### Other considerations

Lost Deer "My Elementary Light Life" ▼



Due to steam and heat, the walls and furniture will be damaged, discolored, and deformed. Therefore, please keep a distance of more than 30CM from the walls and furniture when using. When used in kitchen cabinets and other places, care should be taken to maintain ventilation.



Do not place the stew pot on another heat source (gas stove).  
Do not insert anything into the vents or gaps to avoid electric shock or injury.  
During use or just after use, do not directly touch the stew pot with your hands to avoid high temperature burns.  
During use or just after use, please do not put your body close to the steam outlet, and especially pay attention not to let infants and young children approach, so as not to cause burns.  
While the product is working, do not move or shake it. It is strictly forbidden to cover the steam port with other items during use, so as to avoid the release of steam.  
Do not add water above the maximum water level, otherwise it will cause overflow or other dangers due to boiling.



The steam outlet must be checked regularly to ensure that it is not blocked. If the product is abnormal or malfunctioning, please stop using it immediately, unplug the power plug, and wait until it cools down before opening the lid and taking out the stew.



The water outside the ceramic stew pot of this product is only used for auxiliary heating and cannot be eaten.  
Please do not drop the product or hit hard objects to avoid injury or malfunction.  
Do not use it when the structure of the stew pot is damaged, so as not to cause burns or injuries due to leakage of steam and boiling.  
Do not modify, non-maintenance technicians, non-removable repairs.  
When abnormal or malfunction occurs, please stop using it immediately to avoid fire, electric shock and injury.