 


## Soy milk maker

Applicable model: DJJ-C05H1

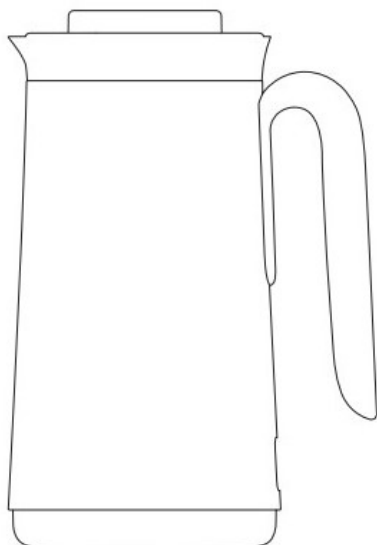


**i** Please read this instruction manual carefully before using the product! This product is intended for domestic or similar use only.  
Execution standard: GB 4706.1-2005 GB4706.19-2008 GB 4806.1-2016  
GB4706.30-2008

**i** When the product picture is slightly different from the actual product, please refer to the actual product.



## Product introduction

 Illustration of the whole machine

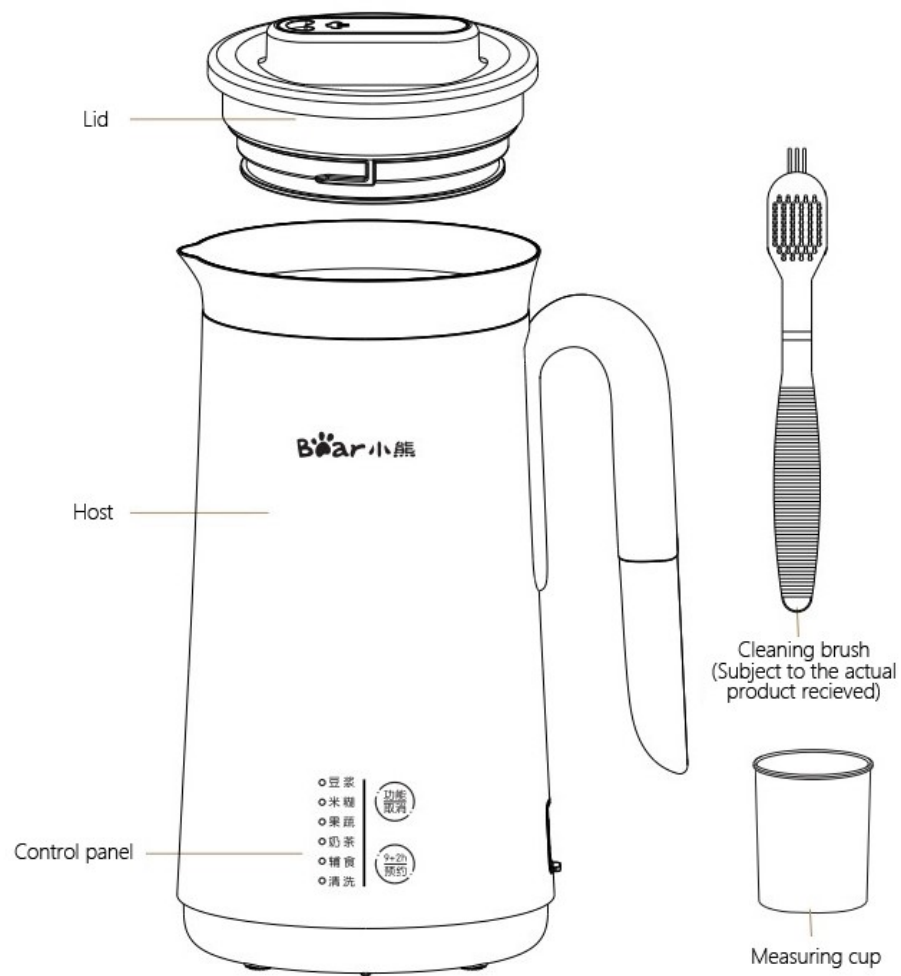



## User guide

### Precautions

To prevent accidents such as electric shock, fire, burns, etc., please observe the following.

- This product has a dedicated power cord, please do not use this product with other similar power cords.
- Before use, please ensure that the voltage used is consistent with the product nameplate (220V~50Hz) to avoid product safety hazards and damage.
- Be sure to disconnect the power before washing or cleaning any parts of the product.

Before use, please check whether the various parts of the product are damaged. If there is damage, please stop using the product and contact the company's after-sales customer service department in time. Do not disassemble and repair it yourself to avoid danger.

- Do not exceed the maximum volume of the cup.
- After the work is completed, wait for the motor and blade to stop rotating, and make sure to disconnect the power before pouring out the drink.
- If the product stops working during operation, it may be caused by the temperature control protection of the motor. Please disconnect the power supply and cool it for 20-30 minutes before use.
- Please operate this product on a water platform, do not operate this product on carpets, towels and other fabrics, and keep away from the edge of the table to prevent falling.
- Do not repeat heating and beating, otherwise it will cause stickiness.
- When making hot drinks, the temperature of the cup body is high, do not touch it; keep the product out of the reach of children to avoid burns.
- The lids of certain fruit and vegetable drinks may be stained, which is a normal phenomenon and is not harmful to health. When using the heating function, do not exceed the upper limit water level of the cup (600mL) to avoid overflowing or undercooking of the ingredients.
- Do not move the product during work to avoid spillage of ingredients, causing burns and electric shock.
- This product uses a high-speed motor, and it is normal for the intermittent sound to appear when the wall is broken.
- If the product needs to be repaired during use, please contact the after-sales service department of our company, or go directly to the repair point designated by our company for repair. Do not disassemble it yourself to avoid danger.

- Do not put any part of this product in the dishwasher for cleaning.
- All parts of this product are not allowed to be sterilized with a microwave oven or a sterilizer to avoid thermal deformation and damage; the materials in contact with the ingredients are all food-grade certified, clean, hygienic and reliable.
- Avoid exposure to sunlight to avoid discoloration of the appearance.
- It is strictly forbidden to disassemble or modify this product by yourself.
- This product is intended for personal or household use only.
- This product should not be used by persons (including children) who are physically impaired, with sensory or mental impairments, or lack of relevant experience and knowledge, unless they are supervised or instructed to use this product by someone responsible for their safety.
- Care should be taken when emptying the jar and during cleaning.
- Use the appliance in accordance with the operating instructions and do not use it for other purposes.
- When cleaning, please rinse the inside of the cup and accessories with clean water, and wipe dry; the blade is very sharp, be careful not to cut the blade when cleaning, and wear protective gloves.
- Wash and cut the ingredients into pieces with a side length of no more than 2 cm.
- If the power cord is damaged, it must be replaced with a dedicated flexible cord or a dedicated component purchased from its manufacturer or service department.
- Do not share an outlet with other high-power electrical appliances.
- When cleaning, be careful not to scratch your fingers, etc. with the blade.
- Do not rinse or immerse the product directly in water.
- Do not use a damaged power cord to avoid the risk of electric shock.
- Do not touch the power cord or electrical appliances with wet hands to avoid the risk of electric shock.
- When inserting and unplugging the power plug, do not pull the power cord directly.
- If there is any abnormality such as fire or smoke during work, please unplug the power plug immediately. Then contact the after-sales service department for service.


- Please place the product in a flat, firm place and keep a certain safe distance from other objects.
- Do not use it near a fire source or in a place with high temperature (above 40°C).
- When the product is working, do not touch the cup to prevent accidental burns.
- When adding water, pay attention to the scale on the cup body, and the amount of water to be added is between the highest and lowest water levels.
- Do not put the machine in the refrigerator for rapid cooling, wash and wipe it before storage, and then let it dry naturally.
- This product can only be used in areas below 2000 meters above sea level.
- This product can only be used in an environment with a temperature of 4°C-40°C.

#### Precautions for first use

1. Please read the manual carefully before use, and keep it properly after reading, so that all users of this product can refer to it at any time.
2. For the first use, please take out all packaging items on the product and clean the accessories.

#### Basic steps

- i** Please cover the lid when making, and make sure that the lid and the body of the cup are in place. As shown below.

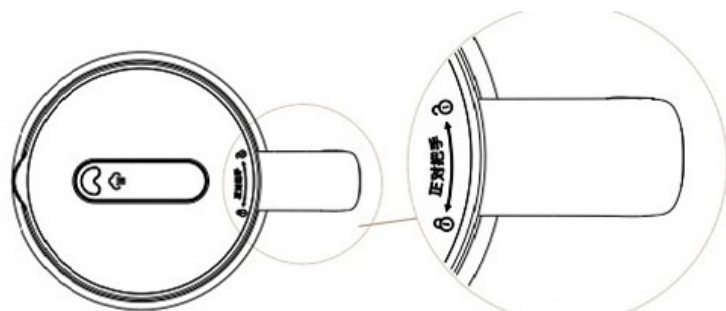

Make sure the lid is snapped into place with the body

#### • Start function

Select function: Click the "Function/Cancel" button, the selected function light flashes, and the function will be automatically entered after about 3 seconds.

#### • Cancel function

Deselected function: Press and hold the "Function/Cancel" button for about 3 seconds to deselect the selected function and return to the standby state.

#### • Production complete

Prompt "Di Di... Di Di" (stop after 5 beeps), and the corresponding function light flashes.

#### • Milk tea function


After the production is complete, please use a strainer to filter.

#### • Reservation function

Please add the materials correctly according to the function of the instruction book. You can make an appointment for 9 hours and keep warm for 2 hours.

#### • Operating guidelines


Open the lid and rotate the lid counterclockwise to open.

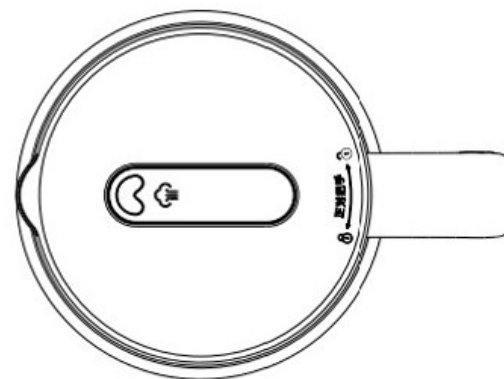


(Turn counterclockwise to open the lid)




Add ingredients and water proportionally and add to the pulping scale, not exceeding the maximum scale, as shown in the figure.

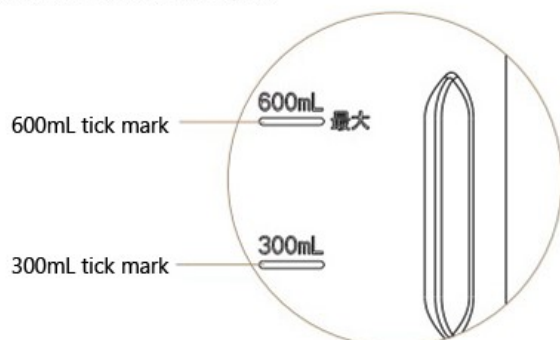


The lid of the cup rotates along the timepiece and the body of the cup is fastened in place, as shown in the figure below.

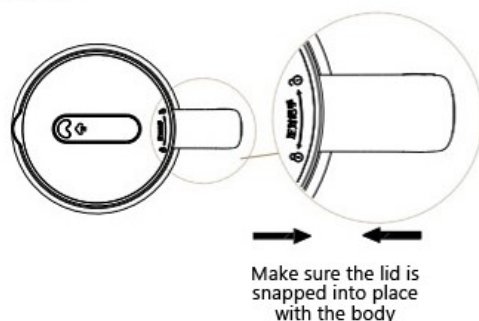

When the power is turned on, a "ringing" sound is prompted when the power is turned on, and the lights are all on, and the "standby mode" is entered.

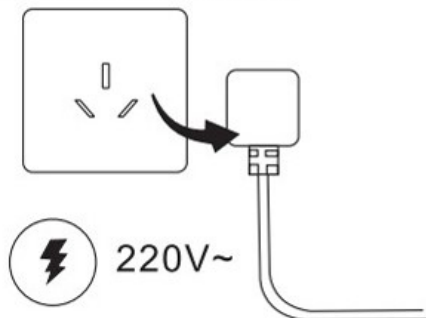

Click the "Function/Cancel" button to select the function, the selected function light will flash, and it will automatically enter the function after about 3 seconds. To cancel, press and hold the button again for about 3 seconds to cancel the function.

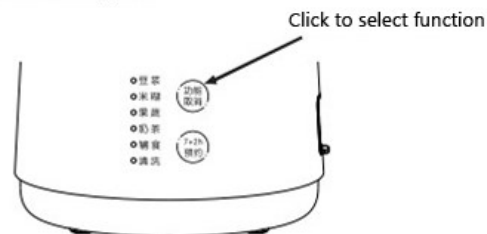

### **i** Warm reminder:

1. The dual anti-dry-burning protection function will automatically stop heating to prevent damage to the product;
2. When the above situation occurs, please pull out the power plug from the socket and wait for the product to cool down naturally (about 10 minutes) before it can be used normally. Do not directly use cold water for cooling, so as not to reduce the service life of the heating system.
3. In order to identify the difference in boiling point at different altitudes, please run the "Soybean Milk Function" to boil water once (the maximum scale water volume) for the first time;



## Function operation

### • "Function/Cancel"

Click the "Function/Cancel" button to select a function, the selected function light will flash, and the selected function will automatically enter for about 3 seconds. Reset the function.

### • "9+2h/appointment"

In standby state, click the "9 + 2h / Reservation" button to set the reservation, the reservation light is always on, click the "Function/Cancel" button to select the function, the corresponding function light is always on, the function is reserved. Setup has been activated. By default, the reservation defaults to 9 hours and reservations to keep warm for 2 hours.



## Basic parameter table

Product name	Soymilk maker
Product model	DJJ-C05H1
Rated voltage	220V~
Rated frequency	50Hz
Rated power	Stirring: 200W heating: 500W
Rated capacity	600mL
Dimensions	175×129×258mm



## Function reference table

Function name	Use
Soy milk	Soybean-based, making soymilk of various flavors
Rice cereal	For making rice cereals of various flavors
Juice	For making juices of various flavors (without heating)
Milk tea	For making milk tea
Complementary food	Used to make all kinds of pastes and muds
Cleaning	For cleaning cups



## Recipe guide

Function	Recipe	Amount of food	
Soymilk (About 30 minutes)	Dried soy milk	300mL: 1/2 cup of dried soybeans (about 23g)	
		600mL: 1 cup of dried soybeans (about 46g)	
	Wet soy milk	300mL: 1/2 cup of dried soybeans (about 23g), fully soaked into wet soybeans	
		600mL: 1 cup of dried soybeans (about 46g), fully soaked into wet soybeans	
Rice cereal (About 35 minutes)	Pure rice cereal	300mL: 1/2 cup of rice (about 30g)	
		600mL: 1 cup of rice (about 60g)	
Fruits and vegetables (About 1 minute)	Banana smoothie	Banana 160g, fresh milk 250mL	
	Fruits and vegetables	Appropriate amount of ingredients, the ratio of fruit to water =2:3	
Milk tea (About 1 minute)	Milk tea	Black tea leaves 4g+ milk 250mL add drinking water to 600mL (after pulping)After completion, add an appropriate amount of brown sugar according to your personal taste)	
Complementary food (About 20 minutes)	Mashed potatoes	Potatoes 130g, water 70g	Tip: The total amount should not be less than 200g, otherwise the stirring effect will not be good.
	Yam clay	Yam 130g, water 70g	
	Pumpkin puree	Pumpkin 130g, water 70g	
	Carrot puree	Carrot 200g, water 100g	




### Tips:

- 1 cup in the amount of ingredients refers to 1 flat cup.
- During use, the total amount of ingredients and water should not exceed the corresponding maximum water level, otherwise it may cause damage to the product.
- It is not recommended to add sugar during the cooking process. Adding sugar may cause overflow or paste the bottom.
- Please process large pieces of ingredients into the size of peanuts.
- All hot drinks will automatically enter the heat preservation after completion.
- Do not re-pulping or re-heating to avoid serious overflow.
- Do not add hot water above 70°C to make pulp, so as not to affect the taste or cause poor crushing, slurry overflow or alarm and other abnormalities.
- After the product starts to work, in case of power failure or other abnormality, please pay attention to replace the ingredients and make it again, otherwise it will cause failures such as paste bottom, slurry overflow, and alarm.



## Cleaning and maintenance

- Be sure to disconnect the power before cleaning, and do not wash the machine in water or place it in a place with water to prevent leakage or damage to the device.
- After the work is completed, please clean it immediately. Using the "cleaning" working method can better clean the cup in the host. Difficult-to-clean residues can be removed with a cleaning brush, and the lid of the cup can be rinsed directly with water.
- When cleaning the cup body, be careful not to scratch the sharp blade.
- Do not use steel balls, hard brushes and other tools to scrub the surface of the product, and do not use chemicals such as alcohol to wipe the main unit.
- After cleaning, it is recommended to wipe it dry or dry it, and then assemble it into a complete machine for storage.
- Do not put it in a disinfection cabinet or dryer to detoxify and dry.
- Do not expose the product, power cord and packaging accessories to direct sunlight.
- If the stainless steel surface such as the inside of the cup body produces local discoloration and blueness after pulping, it is a normal phenomenon. It is harmless to the human body, please feel free to drink it. (The phosphate ions, calcium, chain ions in the ingredients are at a certain temperature Crystallization under conditions causes blueness, which can be removed by wiping with food cool).
- After the product is used, parts such as the lid and sealing ring need to be cleaned as soon as possible to avoid staining after long-term placement. If the parts are stained by the ingredients, try adding a few drops of cooking oil to wipe them before rinsing.
- Please store the product in a dry place.
- It is forbidden to rinse with water at the socket location, and it is forbidden to rinse or soak in water at the base.

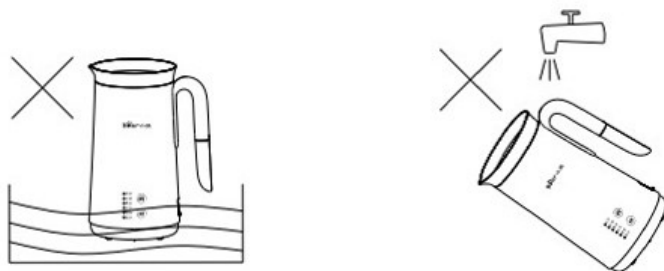

## Common Problem Analysis Table

Fault phenomenon	Explanation of the reason	Exclusion method
Exclusion method	Power cord is not plugged in	Check the power cord and make sure it is plugged in
	Machine failure	Send it to the designated after-sales maintenance department for repair
Heating does not stop	Product temperature control failure	Send it to the designated after-sales maintenance department for repair
Not heated	The product is not selected to enter the function	Reselect function
	Machine failure	Send it to the designated after-sales maintenance department for repair
Button unresponsive	The machine is working, the buttons are unresponsive	Normal phenomenon
	There is water on the button panel	Dry the panel and try again
	The lid is not installed	Check whether the lid is installed in place
	Machine failure	Send it to the designated after-sales maintenance department for repair
Overflow	Excessive amount of ingredients	Place the ingredients according to the appropriate amount of ingredients
	The amount of water exceeds the upper limit water level	Add water to the correct water level
	Misselect function gear	Choose the appropriate function gear
	Change of location (plain to plateau)	First, boil the water with the soil milk or rice paste function once and let the machine adjust the plateau program
Paste bottom	The amount of ingredients is too small	Place the ingredients according to the appropriate amount of ingredients
	Too little water	Add water to the correct water level
	The bottom of the cup body is not cleaned	Clean before use
	Misselect function gear	Choose the appropriate function gear
	Machine failure	Send it to the designated after-sales maintenance department for repair



Remarks: After the analysis of the above phenomena, the fault cannot be ruled out. Please contact our repair point or dealer. It is strictly prohibited for non-professionals to disassemble the machine by themselves.