

## Important Safety Instructions

Please read the manual carefully before using the product and keep it properly.



Before use, please check that the voltage indicated on the bottom of this product is consistent with the voltage used at that time.



It is strictly forbidden to immerse the wireless charging stand in water or other liquids to avoid danger.



Do not use this product in places with flammable and explosive gases or in gas stations.



It is forbidden to charge on a sloping table or an unstable table, and do not approach or place it on any electrical appliances.



The charging base and the purifier product are used together, and other charging bases are strictly prohibited.



This product has a built-in lithium battery, please do not place the product in a high temperature environment or fire source, and do not dispose of this product as general garbage.



The exposed electrolytic electrode is the working part of this product, and it should be avoided when using it, so as not to cause the deformation of the electrolytic electrode sheet and cause it to fail to work normally.



When charging is not required, please unplug the charger from the power outlet.



Do not use this product unattended.



The charging base is not waterproof, do not expose the device to immersion, showering or moisture.



When there is no water in the container or the water surface does not submerge the machine, please do not use the product to avoid damage to the machine.



Under any circumstances, do not insert pins, iron wires, metal pieces or other conductive objects between the two electrodes to avoid short-circuiting the electrodes and failing to work properly.



If the wireless charging base or charging cable is damaged, please contact the after-sales personnel for original accessories or correct model replacement to avoid danger.



If the product is damaged in any way, do not use it. You can contact the customer service of our company and send the product back for repair. Users should not discard it.



An appliance is not intended for use by persons (including children) with reduced physical, sensory or mental abilities or lack of experience and knowledge of use, unless they are supervised or instructed in the use of the appliance by a person responsible for their safety.


- Children should be supervised to ensure that they do not play with this appliance.
- Cleaning and maintenance of appliances should not be performed by children without supervision.
- Disconnect the power connector of the appliance before cleaning when it is not in use or disassembled, it is forbidden for children to be unattended

## Warning

- Before discarding the appliance, the battery must be removed from the appliance;
- The appliance must be switched off when the battery is removed;
- Batteries should be disposed of safely.

## Get to know the product

The company reserves the right to change the design of the product. The product you purchased may have been improved, but it is not completely consistent with the manual, without prior notice, please refer to the actual product! But it will not change its performance and usage, please feel free to use it.

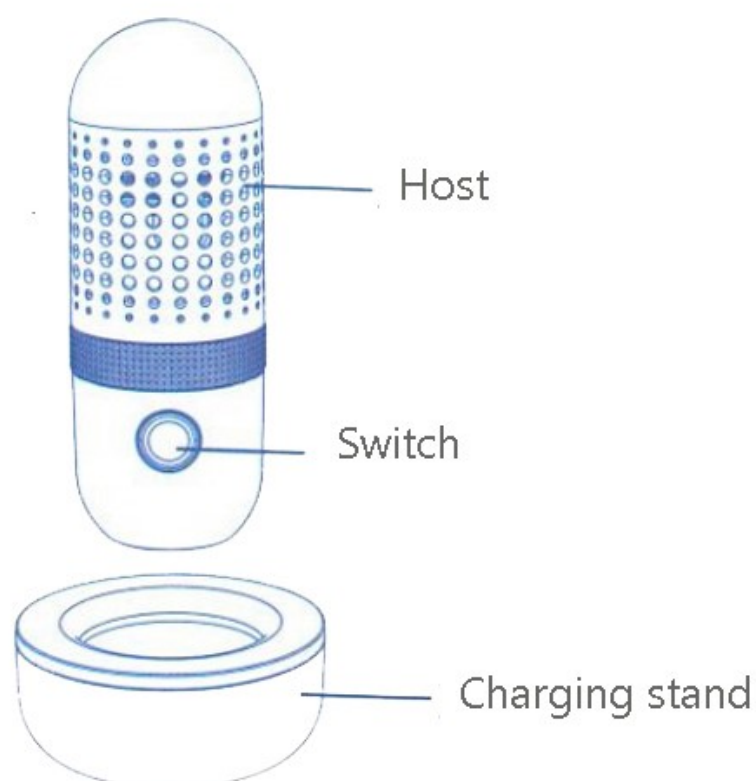


## Product information

Product name	Fruit and vegetable purifier
Model number	DL-001
Waterproof grade	IPX7 (main body)
Rated power	$\leq 8W$
Executive standard	GB 4706.1-2005

## Instructions

1. Please charge the battery before use. It is recommended to use a 5V-2A adapter (please bring your own adapter). Connect the USB charging cable to the adapter and the charging stand, plug the adapter into a household socket, and power on. (As shown in Figure 1)

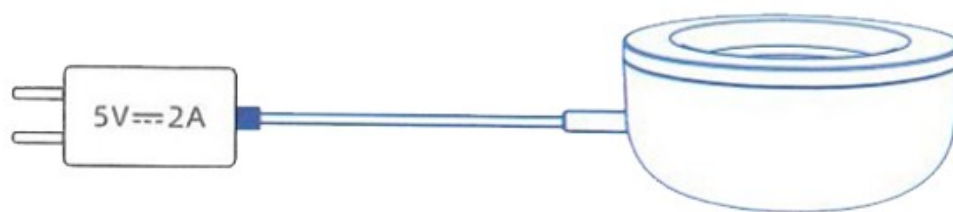

(Figure 1)

2. Place the host on the charging stand, the green light on the switch of the host will flash; when fully charged, the green light will be on. (As shown in Figure 2)



Charging



Fully charged state

(Figure 2)

3. Put the fruits and vegetables to be cleaned in the vegetable basin or sink, and add water with a temperature not exceeding 40°C (recommended to not exceed 3 liters of water at a time).  
(As shown in Figure 3)



(Figure 3)


4. Lightly press the switch of the main unit of the fruit and vegetable machine, a beep will sound, the green light at the switch is on, and the blue light at the electrolysis place flashes.  
(As shown in Figure 4)



(Figure 4)




5. Place the main unit of the fruit and vegetable machine that has been started on the bottom of the washbasin, and keep the main unit lying down. (As shown in Figure 5)

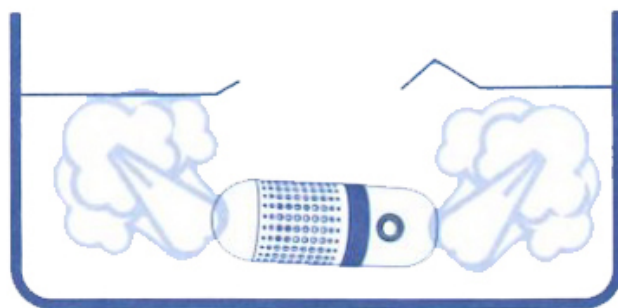


(Figure 5)

6. Please stir the fruits and vegetables from time to time during the working of the fruit and vegetable machine to achieve a better purification effect. It is normal for the electrolyzed water to smell of disinfectants and detergents during work. (As shown in Figure 6)

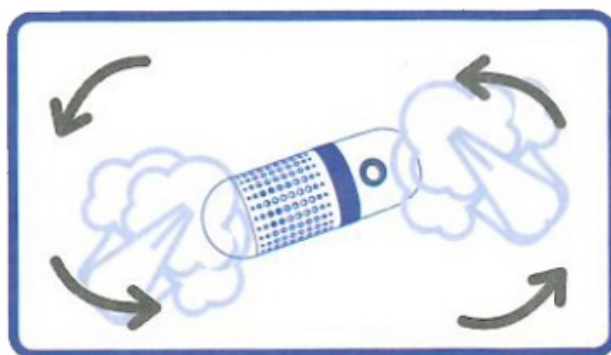

(Figure 6)

7. After the fruit and vegetable machine has finished working, it will beep three times and all the indicator lights will go out. At this time, let the fruits and vegetables in the sink stand for 5-10 minutes to make the electrolysis fully work. Finally, take out the cleaning items and rinse with clean water. (As shown in Figure 7)

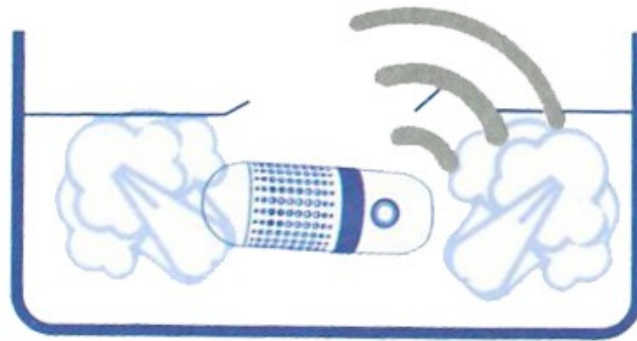

(Figure 7)

## Cleaning and maintenance

1. Please keep the electrolyte sheet free of foreign matter, otherwise the product will not be able to work.
2. When foreign objects fall into the machine, please turn the top cover counterclockwise to open the wash.
3. Clean with a brush of appropriate width to keep the electrolytic sheets no different blockage.
4. Do not try to open the screw cover to avoid product failure due to incorrect reset.

**Note:** After removing the machine from the container water, the cover can be unscrewed to quickly drain the water.