



# 1. Instructions for use

## 1.Product structure

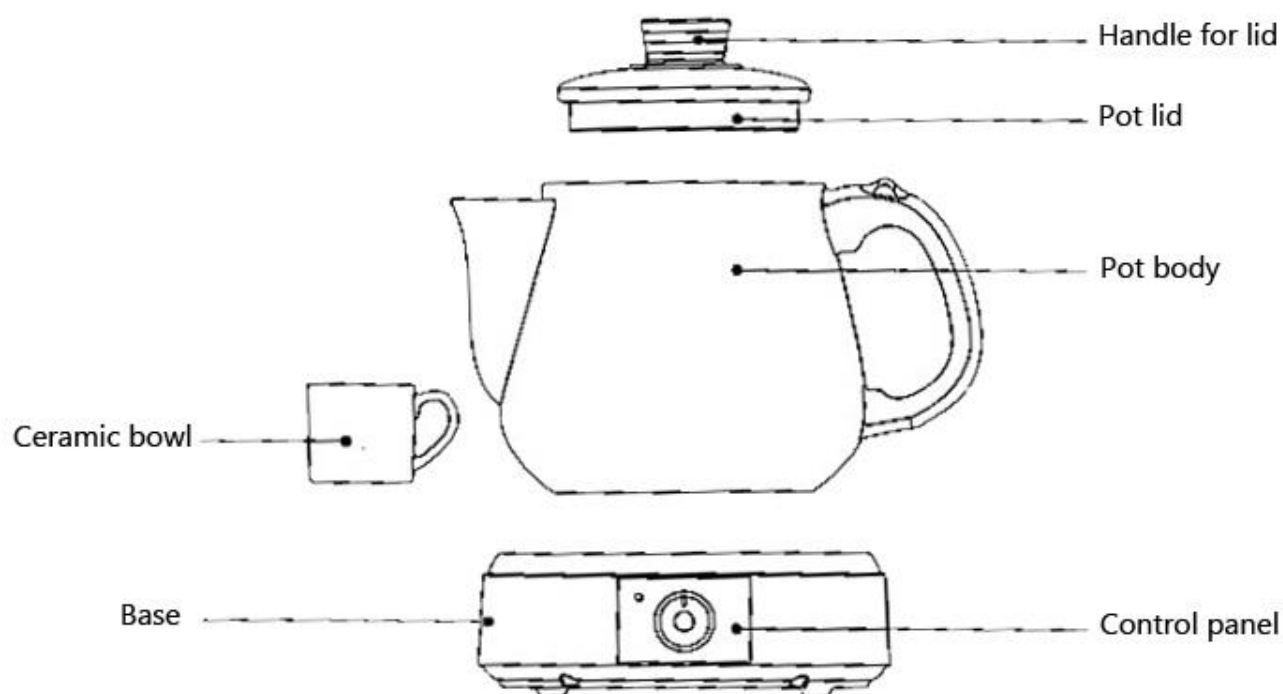

## 2.Control panel

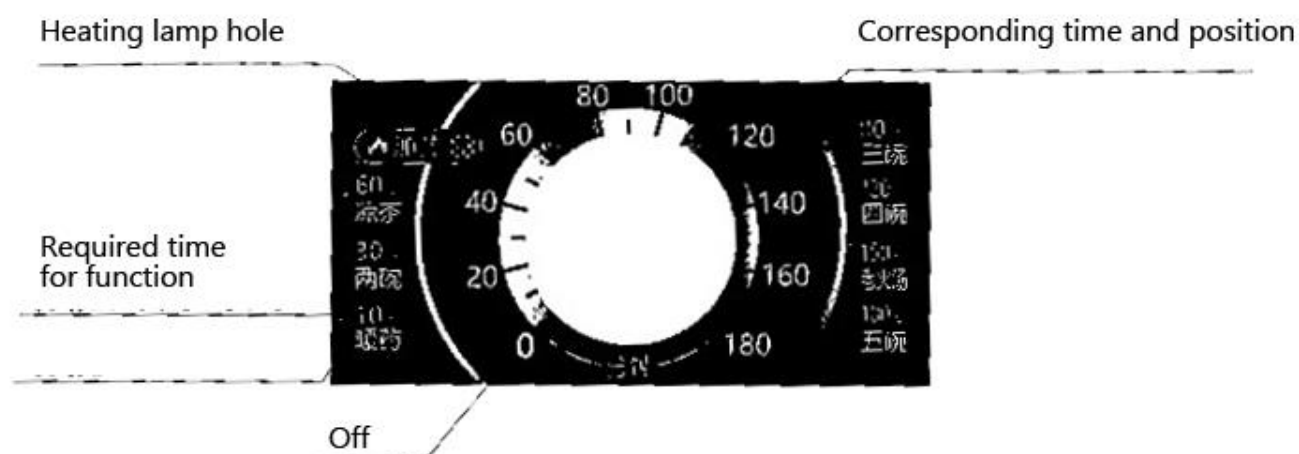

### 3. Matters needing attention

When you use this product, pay special attention to the following:

Note: The ceramic bowl that is not included with the decoction pot is prohibited to be heated on the heating plate.

1. Before use, check whether the rated voltage marked on the product nameplate is consistent with the voltage you are using.
2. Please use a power supply with grounding protection to ensure personal safety.
3. When using this product, it should be placed on a stable platform and out of the reach of children.
4. Do not use this product on (or near) surfaces that are not heat-resistant such as carpets and plastics, and do not place objects that are easily affected by steam on top of this product.
5. When the product is in use, a large amount of steam will be ejected from the steam outlet. Be careful of being scalded by the steam.
6. If the product appears dry burning, please unplug the power supply and do not add cold water immediately to avoid cracking, it needs to be cooled down naturally. At this time, do not touch it with your hands to avoid burns.
7. After use, the heating plate and its surroundings have residual heat, so be careful to be hot.
8. Please keep the surface of the heating plate of the machine clean. After using it for a period of time, dirt on the heating plate surface must be cleaned in time.
9. The pot body cannot be used on open flames such as gas stoves.
10. The fuselage and the pot body need to be used together, and the fuselage cannot be used to heat other containers.
11. Before cleaning this product, please confirm that the power plug has been pulled out from the power socket, and wait for it to cool down completely before cleaning this product.
12. Before cleaning this product, it is strictly forbidden for the base to be immersed in water or rinsed under the tap. After cleaning the kettle body, the water on the surface should be wiped off with a soft cloth to avoid danger from water flowing into the main body.
13. When not in use for a long time, pull out the plug from the socket and store it in a ventilated and dry place.


14. If the power cord is damaged, it must be replaced by a professional from the manufacturer, its maintenance department or similar department in order to avoid danger.
15. The appliance cannot be operated by means of an external timer or an independent remote control system.
16. If there is any fault with this product, please turn off the power first, and pull out the plug from the socket. Do not continue to use it, and contact the company's after-sales service personnel. Do not replace non-original parts or disassemble it by yourself. repair.

## Six methods of use

When in use, place the machine on a horizontal table.


1. According to actual needs, put the medicinal materials into the examination body and add.

Add an appropriate amount of water, and the water and medicinal materials do not exceed the total amount of the body. 60%. (As shown in Figure 1)

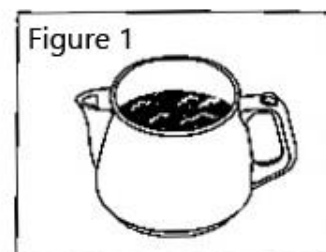

2. Put the special pot body on the heating plate to ensure that the pot body is flat

Stable and reliable. (As shown in Figure 2)

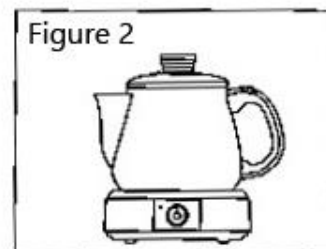


3. Plug in the power supply and adjust the timer according to actual needs

At the corresponding cooking time, start cooking.

For details, please refer to the "Function Time Reference Table".

The following illustration uses "warm medicine" as an example to illustrate:

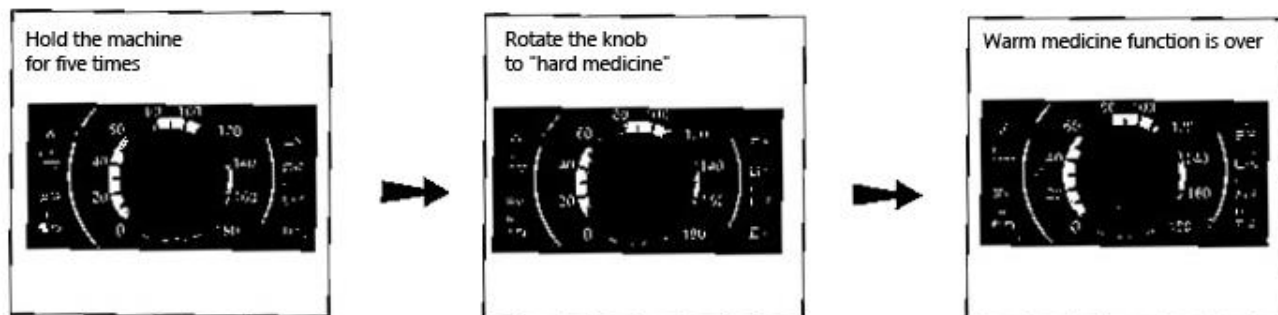

Function time reference table			
Function	Scale time range	Function	Scale time range
Warm medicine	About 7-10 minutes	Four bowls	About 120-130 minutes
Two bowls	About 30-40 minutes	Old fire soup	About 140-150 minutes
Herbal tea	About 50-60 minutes	Five bowls	180 minutes
Three bowls	About 70-80 minutes		
For the specific amount of water and medicinal materials, please follow the doctor's instructions.			

## Warm reminder:

- The capacity of the u-shaped ceramic bowl is about 250mL.
- Under the condition of low temperature 0°-10°, it is recommended to add 10 minutes to the original set function bowl time.
- In the high altitude and high temperature conditions, consumers are advised to reduce the time of the original set number of bowls by 10-15 minutes.
- The above parameter time (the time to make a bowl of concoction) is the data measured under standard conditions.  
Different medicinal materials, voltages, environments, temperatures, etc., have different amounts of concoctions brewed within the default time.  
During the cooking process, you can adjust the cooking time through the knob to control the amount of brewed concoctions. Under standard conditions, boil a bowl of water for 30 minutes.
- Warm medicine function: Pour the medicinal juice into the cup, put it directly on the heating plate, set the machine timer on the warming medicine scale, about 7-10 minutes, and the medicinal juice temperature is about 45°C and you can take it.
- The amount of water to be added should be in accordance with the doctor's advice, or it is advisable to submerge the surface of the medicinal materials, and should not exceed 60% of the volume of the pot.

- When brewing scented tea, in order to facilitate drinking for a long time, the amount of water added may be more than the water amount set by the function, and manual supervision is required during the decoction process to prevent overflow during boiling. It is not recommended to use ingredients that are prone to overflow, such as white fungus and porridge.

## **Five cleaning and maintenance**

1. After use, please unplug the power plug from the power socket in time.
2. The ceramic pot can be cleaned with detergent and sponge.
3. Cleaning method of dirt on the surface of the heating plate: After the heating plate is completely cooled, wipe it with a wet towel.
4. Do not immerse the whole machine in water. The outer surface of the product can only be wiped with a wet towel. Rinse with water to avoid leakage and failure.
5. When using or moving the ceramic medicine pot, handle it with care.
6. When the product is not used for a long time, please clean it, put it in the box, and place it in a ventilated and dry place to avoid moisture and affect the use.

**Note: Please cut off the power before cleaning, and clean after the product has cooled to prevent burns.**

## 6. Common faults and troubleshooting

Serial number	Failure phenomenon	Cause of failure	Exclusion method
1	The indicator light is not on	Indicator light failure	Please send it to the designated repair point for inspection and repair
		Thermostat failure	
2	Heating plate does not heat	Blown fuse	Please send it to the designated repair point for inspection and repair
		Hot plate failure	
3	The indicator light is on. The heating plate is not hot	Hot plate failure	Please send it to the designated repair point for inspection and repair
		Line failure	
4	Can't cook	Overcooked	Adjust the total capacity of ingredients and water
		Incorrect ration of the ingredients to water	Adjust the ratio of ingredients to water
		Line failure	Please send it to the designated repair point for inspection and repair
5	Dry	Too little water	Increase the amount of water
		Line failure	Please send it to the designated repair point for inspection and repair
6	Overflow	Too much water	Reduce water volume